


†Included w/License Lamp Assy

**REAR BUMPER**

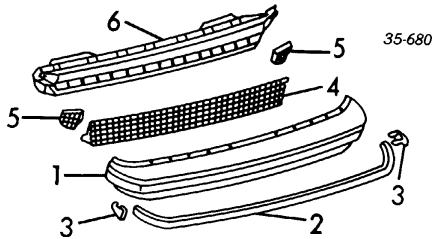


- 1 **Face Bar (Cover)**  
DX Model, LX Model G116-50-221  
GT Model (P) G137-50-221  
(P) Paint to Match
- 2 **Moulding, Cover**  
Black G117-50-235  
Red G118-50-235
- 3 **Piece, End Moulding**  
Black G114-50-058A  
Red G118-50-058A
- 4 **Absorber, Impact**  
Center G032-50-291
- 5 **Outer** R/L G032-50-292-3
- 6 **Bar, Reinforcement** GEY1-50-33XA  
**Screw, Face Bar (19)** G116-50-215

**MAZDA 626 1988-92**


**SECTION INDEX**

A/C /HEATER.....	144
A/C REFRIGERANT CAPACITIES.....	144
ABS/BRAKES.....	145
AIR CLEANER.....	143
BACK WINDOW.....	152
CENTER CONSOLE.....	148
CLEAR COAT IDENTIFICATION.....	141
COOLING.....	142
COWL & DASH.....	148
CRUISE CONTROL SYSTEM.....	145
ELECTRICAL.....	142
EMISSION SYSTEM.....	142
ENGINE.....	143
ENGINE MOUNTS.....	143
EXHAUST.....	143
FRONT BUMPER.....	141
FRONT DOOR.....	149
FRONT DRIVE AXLE.....	146
FRONT FENDER.....	144
FRONT INNER STRUCTURE.....	145
FRONT LAMPS.....	142
FRONT SEAT.....	149
FRONT STEERING LINKAGE/GEAR.....	146
FRONT SUSPENSION.....	145
FUEL TANK.....	154
GRILLE.....	142
HOOD.....	144
INFORMATION LABELS.....	141
INSTRUMENT PANEL.....	148
INTERCOOLER.....	143
LIFTGATE.....	153
LUGGAGE LID.....	153
PAINT CODE LOCATION.....	141
QUARTER GLASS.....	153
QUARTER PANEL.....	152
REAR BODY.....	154
REAR BUMPER.....	156
REAR DOOR.....	150
REAR LAMPS.....	155
REAR SEAT.....	149
REAR STEERING LINKAGE/GEAR.....	154
REAR SUSPENSION.....	154
ROCKER/PILLARS/FLOOR.....	148
ROOF.....	151
SEAT BELTS.....	149
STEERING PUMP.....	147
STEERING WHEEL/COLUMN.....	147
SUNROOF.....	151
TURBOCHARGER.....	143
UNDERHOOD DIMENSIONS.....	144
WHEEL.....	145
WINDSHIELD.....	147

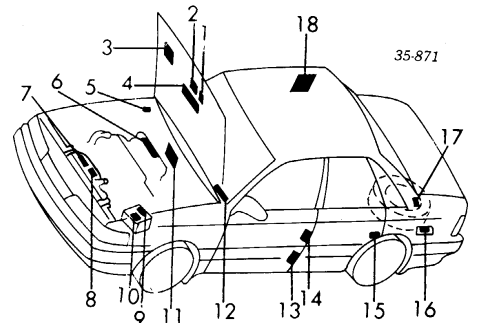

- 9 **Battery**† FA03-69-064A
- 10 **Battery**† FA01-69-064B
- †Order by Application
- 11 **Model Plate** S047-68-425A
- 12 **Plate Caution**  
USA Built GJ51-69-068A  
Japan Built GJ21-69-068A
- 13 **Tire**  
w/Turbo  
1988-89  
To 8-1-88 GN64-69-014A  
From 8-1-88 GJ26-69-014  
1990-92  
2WS GN64-69-014A  
4WS GJ26-69-014  
w/o Turbo GJ21-69-014A
- 14 **Caution** 88-89 DX01-69-A16B  
90-92 NA01-69-C11A  
BA06-72-301
- 15 **Child Proof** 88-89 UB40-69-C61
- 16 **Gasoline** 90-92 UB40-69-C61  
88-89 GL02-69-073  
90-92 GL01-69-073
- 17 **Temporary Tire**
- 18 **Fuel Economy**  
Canada N.A.

**FRONT BUMPER**

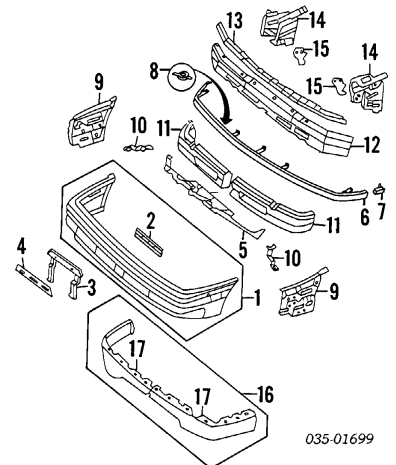

- 1 **Cover Assy, Front**  
1988-89 (P) GJ31-50-030  
DX Model G230-50-030  
LX, Turbo, 4WS  
1990-92  
Body Color/Black (P) G230-50-030  
(P) Paint to Match
- 2 **Brkt, License**† H005-50-060  
†Included w/Front Cover Assy
- 3 **Frame, License** GJ21-50-180
- 4 **Holder, License** GJ21-50-183
- 5 **Cover, Under** GJ21-50-060A
- 6 **Moulding Set, Below Grille** 8AG1-50-F50
- 7 **Protector, Midg End (a)** R G225-50-F53A  
L G225-50-F54A
- 8 **Clip, Moulding (a)** R/L G225-50-F56A  
(a) Included w/Below Grille Moulding Set
- 9 **Slide, Support** R/L G230-50-056-7
- 10 **Bracket, Side** R/L GJ21-50-150
- 11 **Absorber, Impact** R GJ21-50-111  
L GJ21-50-112
- 12 **Bar, Reinforcement** GJY0-50-07X
- 13 **Reinforcement, Upper** G230-50-072
- 14 **Stay, Support** R GJ21-50-080B  
L GJ21-50-090C
- 15 **Cover, Stay** R/L GJ21-50-089
- 16 **Panel Assy, Valance** 8AG1-51-9H0
- 17 **Panel, Valance (b)** R GJ23-51-9K1  
L GJ23-51-9L1  
(b) Included w/Valance Panel Assy
- Plate, Baffle**  
USA Built R GN51-43-67X

**PAINT CODE LOCATION**

Paint code located on right side of cowl panel or left lock pillar.

**CLEAR COAT IDENTIFICATION**

All metallic colors and White (Code VC) are clear coat.

**INFORMATION LABELS**

Illustration Located in Next Column


- 1 **Caution**† GN57-61-439
- 2 **Oil**† 88-89 GJ21-69-D21A  
90-92 GJ22-69-D21D  
GJ21-69-036
- 3 **Emission**†  
†Order by Application
- 4 **Belt Caution** GJ21-69-079A
- 5 **Cover, Hole** 88-89 GJ21-69-079A  
90-92 S047-68-425A
- 6 **Logo**  
w/Turbo F220-13-309B  
w/o Turbo F201-13-309B
- 7 **Plate, Caution** F203-15-201
- 8 **Caution**† AL01-15-031A

# MAZDA 626 1988-92

## FRONT BUMPER Cont'd

Japan Built	L GN51-43-68X R GJ21-43-67XB L GJ21-43-68XB
Tape, Bumper Stripe	R GN51-50-032-5G L GN51-50-039-5G

## GRILLE

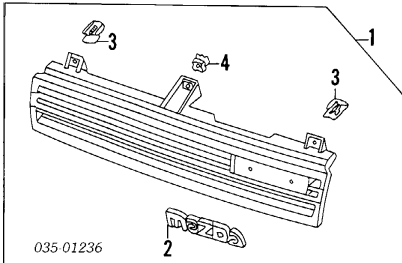


1 Grille Assy	1988-89 Argent Black 1990-92	G225-50-710A GJ29-50-710 GN51-50-710A
2 Nameplate <sup>†</sup>	"Mazda"	B300-51-771
3 Clip, Attaching <sup>†</sup> (4)		B092-50-715
4 Grommet, Screw <sup>†</sup>		G043-51-964

<sup>†</sup>Included w/Grille Assy

## FRONT LAMPS

### COMBINATION LAMP

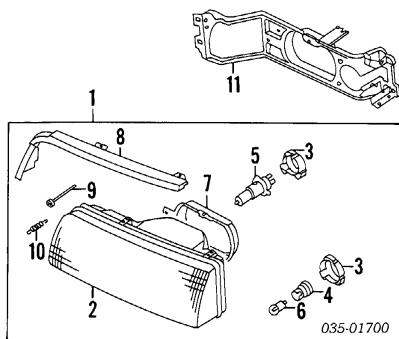


1 Lamp Assy, Combination	R 8BG6-51-030A L 8BG6-51-040A
2 Headlamp Unit <sup>†</sup>	R GJ21-51-0K0C L GJ21-51-0L0C
3 Holder, Bulb <sup>†</sup> (a)	R/L GJ21-51-0A3
4 Socket w/Wire <sup>†</sup> (a)	R/L GJ21-51-0B4B
5 Bulb, Headlamp <sup>†</sup> (a)	R/L 0000-11-9004-90
6 Bulb, Park/Signal <sup>†</sup> (a)	R/L 0000-11-0089
<sup>(a)</sup> Included w/Headlamp Unit	
7 Ring, Mounting <sup>†</sup>	R GJ21-51-032A L GJ21-51-042A
8 Moulding, Headlamp <sup>†</sup>	R GJ37-51-0A9 L GJ37-51-0B9
9 Screw, Adjust <sup>†</sup>	Vertical R/L GJ21-51-047A Horizontal R/L GJ21-51-037A
10 Spring, Adjust <sup>†</sup>	R/L GJ21-51-036
<sup>†</sup> Included w/Combination Lamp Assy	
11 Housing	R GJ37-51-035B L GJ37-51-045B


### HEADLAMP WASHER 2WS

Illustration Located in Next Column

1 Tank Assy	GJ21-51-810C
2 Tank <sup>†</sup>	GJ21-51-812B
3 Cap, Tank <sup>†</sup>	GJ21-67-483
4 Pump Kit <sup>†</sup>	GJ21-51-811
5 Pump, Washer <sup>†</sup>	GJ22-67-482
6 Switch, Level <sup>†</sup>	88-89 G239-67-488 90-92 GJ26-67-488
7 Brkt, Tank Upper <sup>†</sup>	GJ23-67-485
8 Brkt, Tank Lower <sup>†</sup>	GJ22-67-485
<sup>†</sup> Included w/Tank Assy	
Nozzle, Spray	88-89 R/L GJ37-51-820 90-92 R/L GJ21-51-820

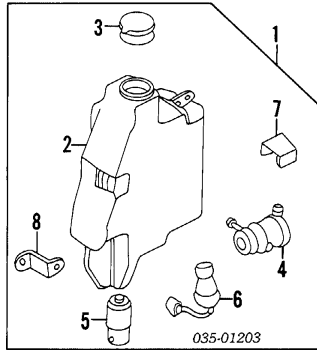


### HEADLAMP WASHER 4WS

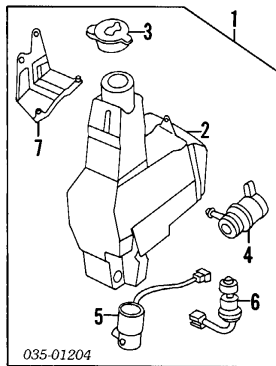

1 Tank Assy	GM39-51-810B
2 Tank <sup>†</sup>	GM39-51-812A
3 Cap, Tank <sup>†</sup>	G238-67-483
4 Pump Kit <sup>†</sup>	GM39-51-811
5 Pump, Washer <sup>†</sup>	G238-67-482
6 Switch, Level <sup>†</sup>	G239-67-488
7 Bracket, Tank <sup>†</sup>	G238-67-485
<sup>†</sup> Included w/Tank Assy	
Nozzle, Spray	88-89 R/L GJ37-51-820 90-92 R/L GJ21-51-820

### PARK/SIGNAL LAMP

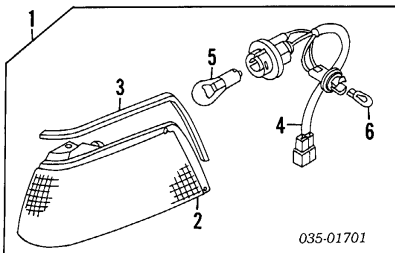


1 Lamp Assy, Park/Signal	R 8BG1-51-060 L 8BG1-51-070
2 Lens & Housing <sup>†</sup>	R GJ37-51-061B L GJ37-51-071B
3 Seal, Body <sup>†</sup>	R G225-51-065 L G225-51-075
4 Socket & Wire <sup>†</sup>	R/L GJ37-51-064A
5 Bulb, Park/Signal <sup>†</sup>	R/L 0000-11-1157-NA
6 Bulb, Side Marker <sup>†</sup>	R/L 0000-11-0168
<sup>†</sup> Included w/Park/Signal Lamp Assy	

## COOLING

Illustration Located in Next Column

1 Radiator Assy	1988-89 Man Trans w/Turbo w/o Turbo Auto Trans w/Turbo w/o Turbo 1990-92 Man Trans w/Turbo	F292-15-200B F201-15-200B F221-15-200D F202-15-200D
-----------------	---	--

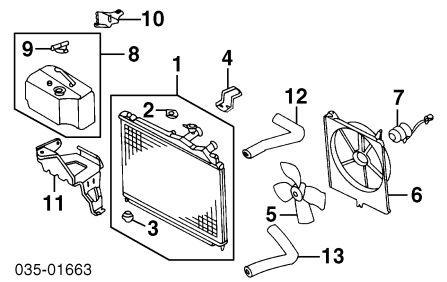

035-01663

USA Built	F292-15-200
Japan Built	F296-15-200
w/o Turbo	
USA Built	F294-15-200
Japan Built	F294-15-200
Auto Trans	
w/Turbo	
USA Built	F293-15-200
Japan Built	FEAP-15-200
w/o Turbo	F295-15-200A
Cap, Radiator <sup>†</sup>	D316-15-205
3 Mount, Radiator Lower <sup>†</sup> (a)	R/L F202-15-202B
<sup>†</sup> Included w/Radiator Assy	
<sup>(a)</sup> Order by Application	
4 Bracket, Upper	R/L F201-15-240A
5 Blade, Fan	
Man Trans	F201-15-140
Auto Trans	
w/Turbo	PN15-15-140
w/o Turbo	FE69-15-140
6 Shroud, Fan	
Man Trans	F203-15-210A
Auto Trans	F204-15-210B
7 Motor, Fan	
Man Trans	
USA Built	
To 12-22-89	F201-15-150A
From 12-22-89	AL01-15-150
Japan Built	F201-15-150A
Auto Trans	
w/Turbo	F277-15-150A
w/o Turbo	88-89 F201-15-150A 90-92 F202-15-150A
8 Tank Assy, Coolant Recovery	
2WS	F201-15-350B
4WS	FE4N-15-350A
9 Cap, Tank (b)	
2WS	F201-15-355
4WS	FE4N-15-355
<sup>(b)</sup> Included w/Coolant Recovery Tank Assy	
10 Brkt, Tank Upper	
2WS	F201-15-391
4WS	FE4N-15-391
11 Brkt, Tank Lower	F201-15-370A
12 Hose, Rad Upper	
Man Trans	
w/Turbo	F220-15-186
w/o Turbo	F202-15-186
Auto Trans	F202-15-186
13 Hose, Rad Lower	F201-15-185A
Pump, Water	8AK1-15-010A

## EMISSION SYSTEM

Valve, EGR	
w/Turbo	F2Y7-20-300A
w/o Turbo	
1988-89	F201-20-300A
1990-92	
w/o Calif Emission	F201-20-300A
w/Calif Emission	F203-20-300B
Gasket, EGR	
w/Turbo	FEH5-20-305
w/o Turbo	
Man Trans	E331-20-305B
Auto Trans	E563-20-305
Valve, Thermo	8682-13-980
Canister, Vapor	88-89 F201-13-970B 90-92 F286-13-970A
Bracket, Canister	F201-13-960A

## ELECTRICAL

### HORN

Horn	
High Note	FB03-66-780A
Low Note	FB03-66-790A

### IGNITION/FUEL

Cap, Distributor	
w/Turbo	F220-18-V00A-9U
w/o Turbo	B616-18-V00-9U
Relay Unit, Central <sup>†</sup>	
DX Model	GJ21-67-580
LX, Turbo Model	GJ24-67-580A
Module, Main Control <sup>†</sup>	ZPA3-18-881R
<sup>†</sup> Order by Application	
Block, Main Fuse	
1988-89	GJ21-66-760C
1990-92	

# MAZDA 626 1988-92

Man Trans	GN51-66-760A
Auto Trans	
w/Turbo	GN56-66-760
w/o Turbo	GN51-66-760A
<b>Bracket, Main Fuse Block</b>	GJ21-67-980D

## ALTERNATOR

<b>Alternator Assy</b> † (a)	F8B1-18-300R-00
†Remanufactured Part. Contact Dealer for Core Charge & Exchange Information	
(a) Order by Application	
<b>Pulley, Alternator (b)</b>	
1988-89	F8B1-18-W11
1990-92	F202-18-W11
(b) Included w/Alternator Assy	
<b>Bracket, Lower</b>	F201-18-371
<b>Bracket, Adjusting</b>	F201-18-361
<b>Belt, Alternator</b>	88-89 F201-18-381A-9U
	90-92 F2F6-18-381-9U


## BATTERY

<b>Battery</b> †	0000-80-026R-WB
†Order by Application	
<b>Cable, Battery-Serviced w/Wiring Harness</b>	

## ENGINE

<b>Pulley, Crankshaft</b>	88-89 F202-11-401
	90-92 F262-11-401
<b>Pulley, Crankshaft Timing</b>	FE1H-11-321
<b>Cover, Upper Timing</b>	F210-10-510
<b>Cover, Lower Timing</b>	FE4R-10-500C
<b>Pan, Eng Oil</b>	FE3N-10-400B
<b>Gasket, Eng Oil Pan</b>	F801-10-431
<b>Sealant, Eng Oil Pan Gasket</b>	8527-77-739
<b>Fuel Pump-See Fuel Tank Section</b>	

## ENGINE MOUNTS

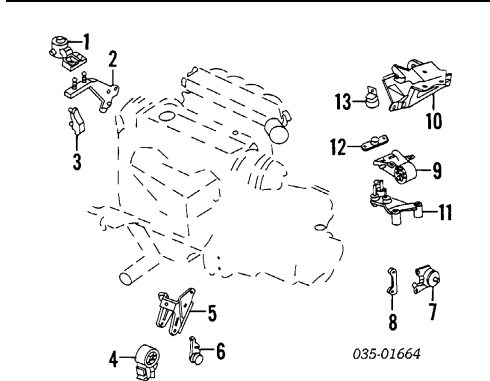


<b>1 Mount, Engine Right</b>	
Man Trans	GJ26-39-060E
w/Turbo	GJ27-39-060E
w/o Turbo	GJ27-39-060E
Auto Trans	88-89 GJ21-39-030G
	90-92 GJ51-39-030A
<b>2 Brkt, Right Mount</b>	
1988-89	GJ21-39-999A
1990-92-Not Serviced	
<b>3 Protector, Rubber Mtg</b>	
1988-89	GJ21-39-050B
1990-92	
w/Turbo	GJ21-39-050B
w/o Turbo	M001-39-050
Auto Trans	GJ23-39-050C
<b>5 Bracket, Front Mount</b>	
Man Trans	GJ25-39-020
w/Turbo	88-89 GJ21-39-020C
w/o Turbo	90-92 M001-39-020
<b>6 Damper, Vibration</b>	
Man Trans	GJ21-39-02XA
w/o Turbo	
<b>7 Mount, Trans Left</b>	
Man Trans	GJ25-39-040B
w/Turbo	88-89 GJ21-39-040A
w/o Turbo	90-92 M001-39-040
Auto Trans	GJ28-39-040E
w/Turbo	88 GJ23-39-040C
w/o Turbo	89-92 M002-39-040B
<b>8 Bracket, Mount</b>	
Man Trans	GJ25-39-04XB
w/Turbo	
w/o Turbo	GJ21-39-04XC
1988-89	
1990-92-Not Serviced	
<b>9 Mount, Trans Upper</b>	
Man Trans	GJ25-39-070C
w/Turbo	GJ21-39-070D
w/o Turbo	GJ23-39-070C
Auto Trans	
<b>10 Bracket, Upper Mounting</b>	
1988-89	M001-39-080

1990-92	M001-39-080
w/Turbo	M001-39-080
w/o Turbo	
<b>11 Bracket, Lower Mounting</b>	
Man Trans	GJ21-39-090A
w/o Turbo	
<b>12 Damper, Vibration</b>	
Man Trans	GJ21-39-07Y
w/o Turbo	
<b>13 Damper, Vibration</b>	
Man Trans	GJ21-39-08X
w/o Turbo	
<b>Xmbr, Eng-See Rocker/Pillars/Floor Section</b>	


## AIR CLEANER

### W/TURBO

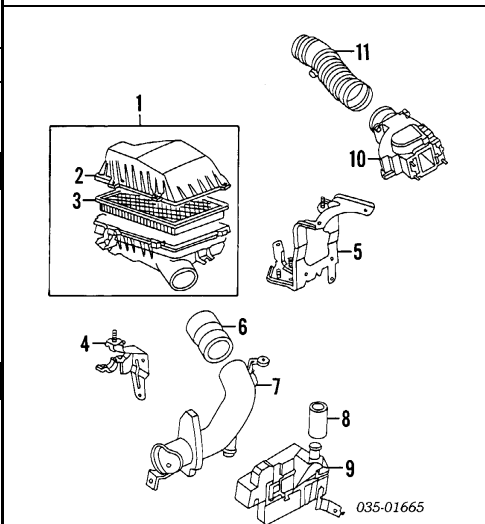

<b>1 Cleaner Assy, Air</b>	F220-13-320F
<b>2 Cover, Air Cleaner†</b>	F220-13-Z01A
<b>3 Element, Filter†</b>	AS01-13-Z40-9U
†Included w/Air Cleaner Assy	
<b>4 Bracket, Cleaner Right</b>	F201-20-210C
<b>5 Bracket, Cleaner Left</b>	F201-20-220D
USA Built	
Japan Built	F201-20-220D
To 7-1-90	FEHH-20-220
From 7-1-90	F201-13-206
<b>6 Hose, Air</b>	F201-13-206
<b>7 Duct, Fresh Air</b>	F220-13-20XB
<b>8 Hose, Resonance</b>	F201-13-207
<b>9 Chamber, Resonance</b>	88-89 F201-13-19XE
	90-92 F285-13-19XC
<b>10 Meter, Air Flow</b>	F201-13-210R-00
<b>11 Hose, Intake Air</b>	F220-13-221B
1988-90	
1990-92	F220-13-221B
Man Trans	F220-13-221B
Auto Trans	F221-13-221B


### W/O TURBO

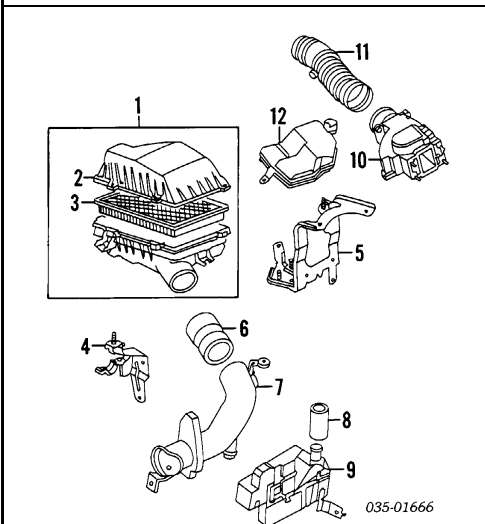

<b>1 Cleaner Assy, Air</b>	F220-13-320F
USA Built	F201-13-320D
Japan Built	
<b>2 Cover, Air Cleaner†</b>	F292-13-Z01
USA Built	F220-13-Z01A
Japan Built	
<b>3 Element, Filter†</b>	AS01-13-Z40-9U

†Included w/Air Cleaner Assy	
<b>4 Bracket, Cleaner Right</b>	F201-20-210C
<b>5 Bracket, Cleaner Left</b>	F201-20-220D
1988-90	
1991-92	F201-20-220D
USA Built	FEHH-20-220
Japan Built	F201-13-206
<b>6 Hose, Air</b>	F201-13-20XA
<b>7 Duct, Fresh Air</b>	
1988-89	F201-13-20XA
1990-92	F285-13-20X
USA Built	F201-13-207
Japan Built	F201-13-19XE
<b>8 Hose, Resonance</b>	88-89 F285-13-19XC
<b>9 Chamber, Resonance</b>	90-92 F201-13-19XC
<b>10 Meter, Air Flow</b>	F201-13-210R-00
<b>11 Hose, Intake</b>	F201-13-221B
<b>12 Resonator, Intake</b>	F202-13-195B

## INTERCOOLER

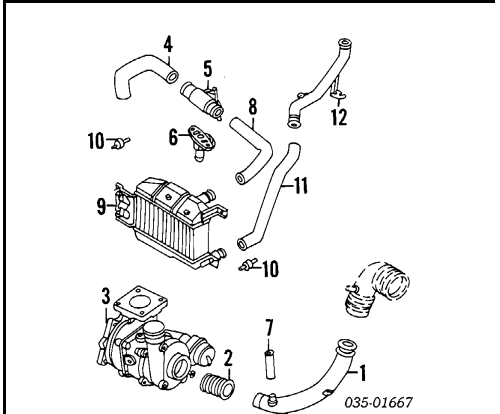


<b>1 Pipe, Air</b>	F220-13-331B
<b>2 Joint, Rubber</b>	F220-13-224A
<b>3 Turbocharger Assy-See Turbocharger Section</b>	
<b>4 Hose, Intake Air</b>	F220-13-222A
<b>5 Pipe, Air</b>	F220-13-230A
<b>6 Valve, Air By-Pass</b>	F220-20-250B
<b>7 Hose, By-Pass Air</b>	F220-13-751A
<b>8 Hose, Intake Air</b>	F220-13-225A
<b>9 Intercooler</b>	F220-13-565C
<b>10 Insulator, Mounting (4)</b>	F220-13-363
<b>11 Hose, Intake Air</b>	F220-13-223A
<b>12 Pipe, Air</b>	
Man Trans	F220-13-360C
Auto Trans	F220-13-360C

## EXHAUST

<b>Manifold, Exhaust</b>	F220-13-450C
w/Turbo	F202-13-450
w/o Turbo	
<b>Insulator, Exhaust</b>	
w/Turbo	F287-13-390A
w/o Turbo	F285-13-390A
<b>Pipe, Front Exhaust†</b>	F201-40-500
<b>Converter, Catalytic†</b>	FEY2-20-600
<b>Pre-Silencer†</b>	FEH7-40-300D
<b>Pipe, Middle†</b>	F213-40-600A
<b>Muffler, Main†</b>	F203-40-100F
†Order by Application	

## TURBOCHARGER

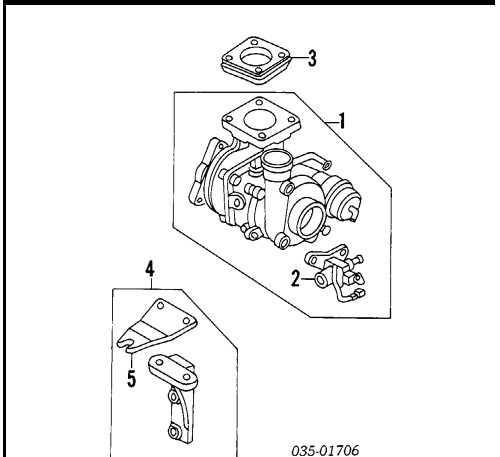

<b>1 Turbocharger Assy</b>	F220-13-700B
<b>2 Valve, Solenoid†</b>	F220-20-285A
†Included w/Turbocharger Assy	
<b>3 Gasket</b>	F220-13-710B

# MAZDA 626 1988-92


## TURBOCHARGER Cont'd

- 4 Bracket Assy F220-13-520B
  - 5 Bracket, Plate† F220-13-522A
- †Included w/Bracket Assy


## A/C REFRIGERANT CAPACITIES

A/C R-12 Refrigerant Capacity  
 1988-90: 34-37 Ozs (2.12-2.31 Lbs)  
 1991-92: 32 Ozs (2.0 Lbs)

## A/C /HEATER AIR CONDITIONING

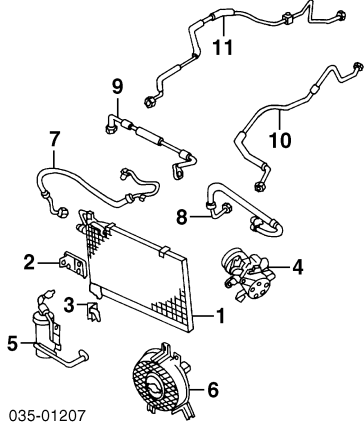

- 1 Condenser† GJ51-61-480B
- †Order by Application
- 2 Bracket, Upper GJ51-61-483
- 3 Bracket, Lower GJ51-61-484
- 4 Compressor Assy GJ51-61-450B
- Clutch Assy (a) GJ51-61-L10
- (a) Included w/Compressor Assy
- Pulley, Clutch (b) GJ51-61-L12
- (b) Included w/Clutch Assy
- Belt, Compressor† F230-15-909
- Receiver/Drier† GJ51-61-500D
- w/Turbo GJ54-61-500A
- w/o Turbo
- 6 Fan, Condenser†
- Man Trans M001-61-710B
- Auto Trans GN52-61-710A
- 7 Hose, Discharge† GJ51-61-461B
- Hose, Suction†
- Man Trans GJ51-61-462A
- Auto Trans GP34-61-462A
- †Order by Application
- 8 Man Trans GJ51-61-462A
- Auto Trans GP34-61-462A
- †Order by Application
- 9 Man Trans GJ51-61-462A
- Auto Trans GP34-61-462A
- †Order by Application
- 10 Pipe to Compressor GJ51-61-465
- 11 Pipe to Drier† GJ51-61-464
- †Order by Application

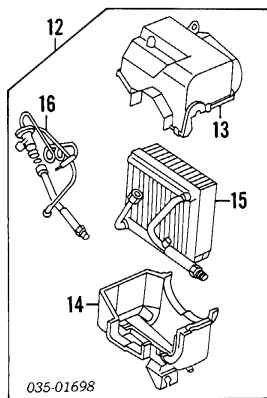


- 12 Evaporator Assy GJ51-61-520D
- 13 Case, Evaporator (c) GJ51-61-J01
- 14 Case, Evaporator Lower (c) GJ51-61-J02
- 15 Core, Evaporator (c) GJ51-61-J10B
- 16 Valve, Expansion (c) GJ51-61-J14
- (c) Included w/Evaporator Assy

## HEATER


Illustration Located in Next Column

- 1 Heater Assy

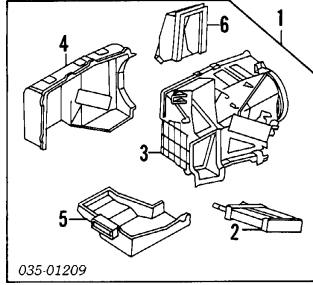


- USA Built 88-89 GJ51-61-130C
- 90-92 GN81-61-130A
- Japan Built GJ21-61-130D
- 2 Core, Heater† GJ21-61-A10
- 3 Case, Inner† GJ51-61-A01
- USA Built GJ21-61-A01
- Japan Built GJ51-61-A02
- USA Built GJ21-61-A02
- Japan Built GJ21-61-A03
- 5 Case, Lower† GJ21-61-A04
- 6 Case, Upper† GJ21-61-A04
- †Included w/Heater Assy

## BLOWER

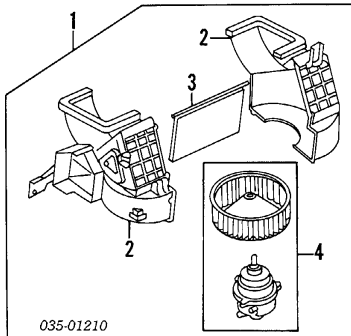

- 1 Blower Assy, Heater (a) GJ83-61-140C
- (a) Order by Application
- 2 Case, Half† R GJ21-61-B02A
- L GJ21-61-B01A
- 3 Door, Blower Flap† GJ21-61-B05
- 4 Fan & Motor† 88-89 GJY1-61-B10
- 90-92 GJY1-61-B10
- †Included w/Heater Blower Assy


## HOOD

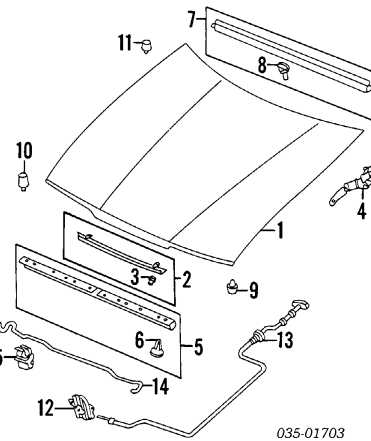

- 1 Hood GJY1-52-310A
- 2 Moulding Assy, Front Hood 8AG1-50-411
- 3 Grommet, Screw (a) (2) B216-51-905
- (a) Included w/Front Hood Moulding Assy
- 4 Hinge, Hood R GJ21-52-410B
- L GJ21-52-420B
- 5 Seal Assy, Front Hood GJ21-56-750B
- 6 Clip, Front Seal (b) 9926-40-531B
- (b) Included w/Front Hood Seal Assy
- 7 Seal Assy, Cowl GJ21-56-760
- 8 Clip, Cowl Seal (c) (12) G031-58-762
- (c) Included w/Cowl Seal Assy
- 9 Bumper, Hood Cushion (4) B092-62-877
- 10 Cushion, Front Side Body R/L FB01-56-787B



- 11 Cushion, Rear Side Body R/L FB01-56-788
- 12 Lock, Hood w/Theft Deterrent GJ22-56-620D
- w/o Theft Deterrent GJ21-56-620C
- 13 Cable, Release GJ21-56-720B
- 14 Rod, Hood Stay GJ21-56-650A
- 15 Clip, Hood Stay G030-56-693A
- Insulator, Hood GJ21-68-601A

## UNDERHOOD DIMENSIONS

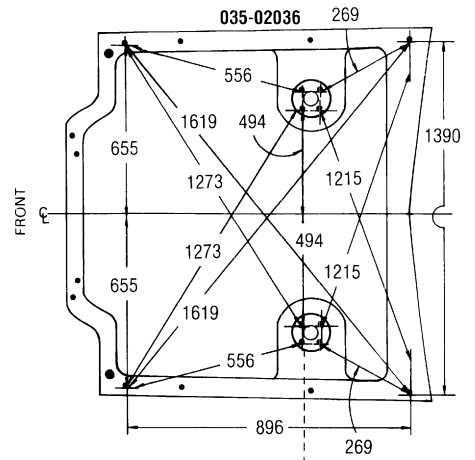


## FRONT FENDER

### SHEET METAL

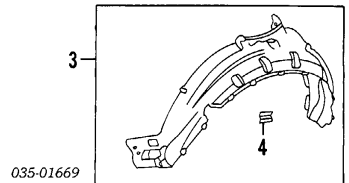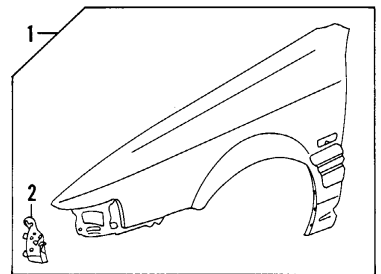

- 1 Fender Assy R GJY7-52-110A
- L GJY7-52-210A
- 2 Bracket, Lamp† R G213-52-180
- L G213-52-280
- †Included w/Fender Assy
- 3 Shield Assy, Splash R G211-56-130B
- L G211-56-140B
- 4 Clip, Splash Shield (a) R/L 8173-56-135
- (a) Included w/Splash Shield Assy

## EXTERIOR TRIM

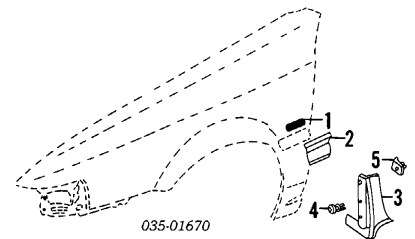


- 1 Nameplate (Decal) "DX" R/L G717-51-761
- "LX" R/L GJ21-51-761
- "GT" R/L GJ25-51-761
- 2 Moulding, Side Adhesive 1988-89 R GN81-50-681
- L GN81-50-691

# MAZDA 626 1988-92

1990-92 USA Built	R GN81-50-681 L GN81-50-691
Japan Built	
Black	R G212-50-681 L G212-50-691
Body Color†	R G243-50-681-04 L G243-50-691-04
†Black/Silver listed, Order by Application UC Crystal White/Silver; PZ Brilliant Black/Silver; SQ Blaze Red/Silver; 6L Graceful Red/Silver; NU Vintage Red/Silver; 6S Exceed Green/Silver; 5N Brave Blue/Silver; 1H Steel Gray/Silver; 3L Silver Stone M/Silver	
3 Mudguard	R G211-51-840 L G211-51-850
4 Rivet (2/Side)	R/L B092-51-833
5 Grommet	R/L G030-51-852
Tray, Battery	BG62-56-032A
Support, Tray	GJ21-56-040A
Clamp, Battery Hold-Down	GJ21-56-03XA
Bolt, Clamp	
Front	0259-54-292A
Rear	0613-65-857A

## FRONT INNER STRUCTURE


FRONT

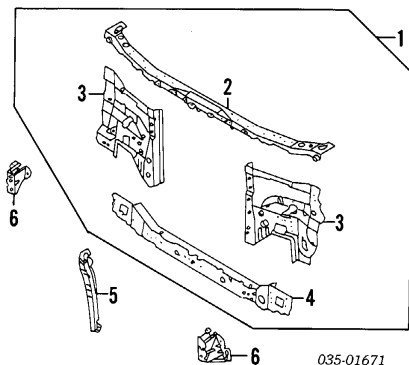

035-01671

1 Support Assy, Radiator	
USA Built	GJ21-53-100K
To 12-4-89	GN98-53-100
From 12-4-89	GJ21-53-100K
Japan Built	
2 Bar, Upper Tie†	GJ21-53-150C
1988-89	
1990-92	GJ21-53-150C
USA Built	
Japan Built	GJ21-53-150C
3 Panel, Side†	
USA Built	
To 12-4-89	R GJ21-53-120E L GJ21-54-120D
From 12-4-89	R GN98-53-120 L GN98-54-120
Japan Built	R GJ21-53-120E L GJ21-54-120D
4 Bar, Lower Tie†	
USA Built	GJ21-53-16XD
To 12-4-89	GN98-53-16X
From 12-4-89	GJ21-53-16XD
Japan Built	
†Included w/Radiator Support Assy	
5 Support, Latch	GJ21-56-220B
6 Bracket, Lamp	R GJ21-52-140A L GJ21-52-240A

SIDE

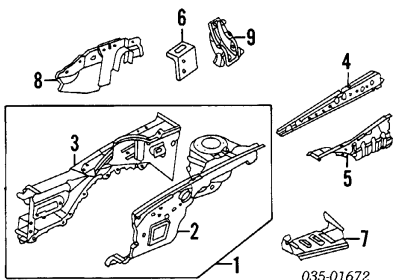


035-01672

1 Apron Assy	R GJ22-53-200 L GJ22-54-200
2 Panel, Apron†	R GJ22-53-210F L GJ22-54-210E
3 Frame, Side†	
USA Built	
To 11-3-89	R GJ21-53-300R L GJ21-54-300P
From 11-3-89	R GJ21-53-300R L GJ21-54-300P

Japan Built	R GJ21-53-300R L GJ21-54-300P
†Included w/Apron Assy	
4 Reinf, Upper Apron	R GJ21-53-281D L GJ21-54-281D
5 Reinf, Lower Apron	R GJ21-53-291A L GJ21-54-291A
6 Brkt, Hinge Stop	R GJ21-53-575B L GJ21-54-575B
7 Plate, Apron Seal	R/L G217-56-381A
8 Guard, Splash	
1988-89	
w/Turbo	
Man Trans	R GJ21-56-330D L GJ21-56-341A
Auto Trans	R GJ21-56-330D L GJ21-56-341A
w/o Turbo	R GJ21-56-330D L GJ21-56-341A
1990-92	
USA Built	
w/Turbo	
To 12-4-89	R GJ21-56-330D L GJ21-56-341A
From 12-4-89	R GN98-56-330 L GJ21-56-341A
w/o Turbo	R GJ21-56-330D L GJ21-56-341A
Japan Built	R GJ21-56-330D L GJ21-56-341A
9 Bracket, Engine Mount	M001-53-370A


## CRUISE CONTROL SYSTEM

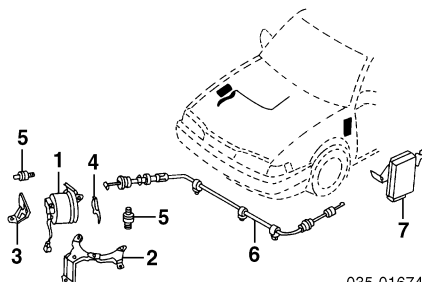

035-01674

1 Actuator, Cruise	
w/Turbo	GN55-66-310C
w/o Turbo	GN51-66-312
2 Brkt, Actuator Mtg	GJ21-66-31Y
3 Brkt, Actuator Front	GN51-66-3A1B
4 Brkt, Actuator Rear	GN51-66-3A8B
5 Mount, Rubber (3)	F285-13-363
6 Cable, Cruise	
w/Turbo	GN55-66-311
w/o Turbo	GJ21-66-311B
7 Control Unit, Cruise	
w/Turbo	GN55-66-320
w/o Turbo	GN51-66-320

## ABS/BRAKES

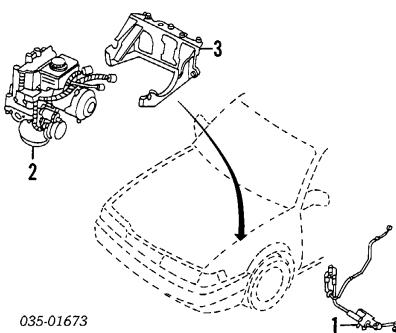


035-01673

1 Sensor, ABS Wheel	
See Front or Rear Suspension Section	
2 Actuator, ABS	
USA Built	
To 10-2-91	KA11-43-7A0C
From 10-2-91	GN90-43-7A0C
Japan Built	GJ55-43-7A0C
3 Brkt, Actuator	
USA Built	
To 10-2-91	GJ55-43-310B
From 10-2-91	GN90-43-310A
Japan Built	GJ55-43-310B

## WHEEL


### STEEL WHEEL

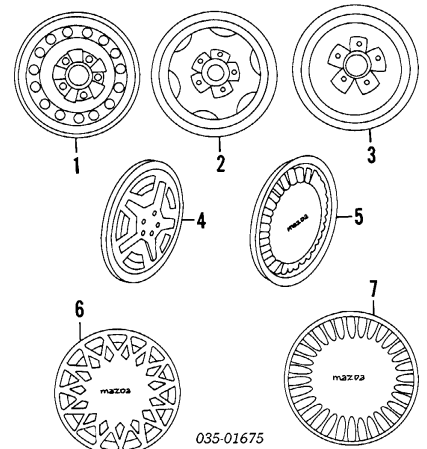

035-01675

Wheel, Steel	
1 Black	9965-84-5540
2 Silver	9965-86-554
3 Wheel, Spare	9965-10-4050
Cover, Wheel	
1988-89	
4 w/Hub Nut Holes	G214-37-170B
5 w/o Hub Nut Holes	GJ25-37-170
1990-92	
6 Type A	GN51-37-170A
7 Type B	GJ29-37-170
Stem, Valve	9963-60-4130

### ALUMINUM WHEEL

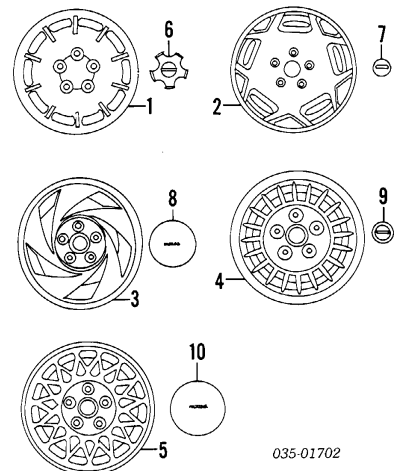

035-01702

Wheel Assy, Aluminum	
1 Style 1	8BG1-37-600
2 Style 2	8DG8-37-600
3 Style 3†	R 8DG3-37-600 L 8DG4-37-600
4 Style 4	8BGU-37-600
5 Style 5	8DG9-37-600
†Silver listed, Order by Application	
Cap, Center (a)	
6 Style 1	G213-37-191A
7 Style 2	B004-37-192
8 Style 3†	GJ23-37-191A
9 Style 4	H115-37-192
10 Style 5	
USA Built	GN82-37-191A
Japan Built	GN52-37-191A
†Silver listed, Order by Application	
Stem, Valve (a)	9963-60-4130
(a) Included w/Wheel Assy	
Wheel, Spare	9965-10-4050


## FRONT SUSPENSION

Illustration Located in Next Column


1 Hub	
2 Wheel Disc Brakes	R/L GJ51-33-060A
4 Wheel Disc Brakes	R/L GJ55-33-060A

# MAZDA 626 1988-92

## FRONT SUSPENSION Cont'd

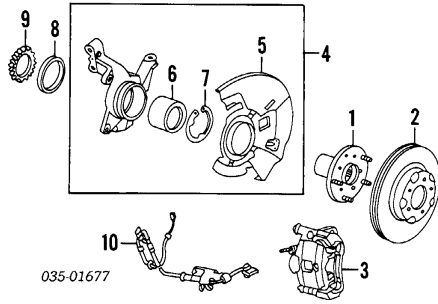


- 2 Rotor, Brake R/L GJ55-33-25XD
- 3 Caliper, Brake 88-89 R G2Y5-33-98ZR  
L G2Y5-33-99ZR  
90-92 R/L G2Y5-33-98ZR
- Hose, Brake†  
†Order by Application
- 4 Knuckle Assy w/ABS R GJ56-33-020E  
L GJ56-33-030E  
w/o ABS R GJ51-33-020F  
L GJ51-33-030F
- 5 Shield, Splash (a) R GJ51-33-261A  
L GJ51-33-271A
- 6 Bearing (a) R/L H266-26-151-MV
- 7 Circlip (a) R/L H266-26-139  
(a) Included w/Knuckle Assy
- 8 Seal, Bearing R/L G304-33-065
- 9 Rotor, Sensor R/L GJ26-33-471A
- 10 Sensor, ABS Wheel R GJ26-43-70XA  
L G09A-43-73XB

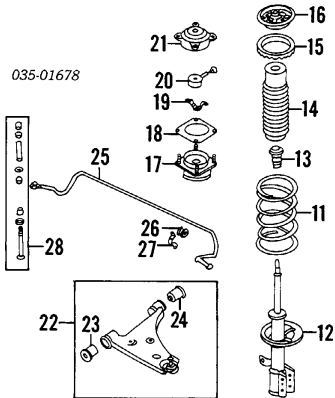

- 11 Spring† R/L GM74-34-011A  
†Order by Application
- 12 Strut† w/AAS R GJ22-34-700E-9U  
L GJ22-34-900E-9U  
w/o AAS R G211-34-700H-9U  
L G211-34-900H-9U
- 13 Bumper, Stopper 2WS w/Turbo R/L KA11-34-111A  
w/o Turbo USA Built R/L GJ21-34-111  
Man Trans R/L GJ23-34-111  
Auto Trans R/L GJ21-34-111  
Japan Built R/L GN98-34-111
- 14 Cover, Lever USA Built R/L GJ21-34-015  
Man Trans R/L GJ23-34-015  
Auto Trans R/L GJ21-34-015  
Japan Built R/L GJ21-34-012
- 15 Seat, Rubber R/L GJ21-34-340A
- 16 Seat, Spring† R/L GJ21-34-340A
- 17 Insulator, Mounting† Man Trans R/L GJ21-34-380C  
Auto Trans R/L GJ23-34-380B  
†Order by Application
- 18 Plate, Adjust R/L GJ21-34-013
- 19 Bracket, Plate (b) USA Built R/L GN81-34-088  
Japan Built R/L GJ22-34-088
- 20 Actuator (b) R/L GJ22-34-080A  
(b) For AAS Only
- 21 Cap, Mount w/Turbo R/L GJ23-34-019  
w/o Turbo R/L GJ21-34-019A  
Man Trans R/L GJ23-34-019
- 22 Arm Assy, Lower 1988-89 R GJ22-34-300B  
2WS

- 4WS L GJ22-34-350B  
R GJ83-34-300B  
L GJ83-34-350B
- 1990-92 w/Turbo R GJ22-34-300B  
L GJ22-34-350B
- w/o Turbo USA Built R GN98-34-300A  
L GN98-34-350A
- Japan Built R GJ22-34-300B  
L GJ22-34-350B
- 23 Bushing, Front (c) 2WS R/L GJ21-34-470B  
4WS R/L KA10-34-470A
- 24 Bushing, Rear (c) R/L GJ21-34-460B  
(c) Included w/Lower Arm Assy
- 25 Bar, Stabilizer 2WS 1988-89 w/Turbo G211-34-151B  
To 6-27-88 GN94-34-151B  
From 6-27-88 w/o Turbo G211-34-151B
- 1990-92 USA Built GN81-34-151A  
Japan Built w/Turbo GN94-34-151B  
w/o Turbo G211-34-151B
- 4WS G238-34-151B
- 26 Bushing, Bar 88-89 R/L G030-34-156B  
2WS 90-92 R/L GN81-34-136
- 4WS R/L G041-34-156B
- 27 Bracket, Bar 2WS R/L KA11-34-155  
w/Turbo R/L GJ21-34-155  
w/o Turbo R/L GJ21-34-155
- 4WS R/L 8AG2-34-100
- 28 Mtg Kit, Stab Bar

## FRONT DRIVE AXLE

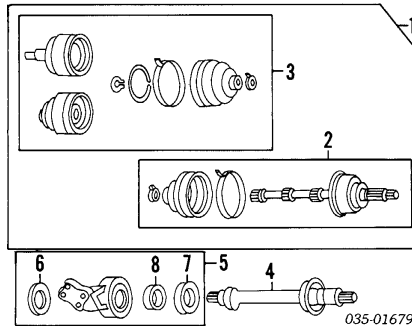


- 1 Shaft Assy, Axle w/Turbo R G054-25-500A  
Man Trans L G054-25-600D  
Auto Trans R G064-25-500B  
L G064-25-600D
- w/o Turbo Man Trans R G034-25-50XA  
L G034-25-60XA
- Auto Trans To 9-1-89 R G044-25-50XC  
L G044-25-60XD  
From 9-1-89 R G044-25-50XC  
L GT43-25-600A
- 2 Joint Set, Outer CV† Man Trans w/Turbo R/L G054-22-510A  
w/o Turbo R/L G034-22-510B
- Auto Trans w/Turbo R/L G064-22-510
- To 9-1-89 R/L G044-22-510D  
From 9-1-89 R/L G044-22-510D
- 3 Joint Set, Inner CV† Man Trans w/Turbo R G053-22-520  
L G053-22-620B  
w/o Turbo R G033-22-520  
L G033-22-620B
- Auto Trans w/Turbo R G063-22-520  
L G063-22-620B
- To 9-1-89 R G043-22-520A  
L G043-22-620C  
From 9-1-89 R G043-22-520B  
L GA43-22-620B
- Boot Set† Man Trans w/Turbo R/L GS70-V9-050-9U  
Outer R/L G053-22-540  
Inner R/L GS50-V9-050-9U  
w/o Turbo Outer R/L G033-22-540  
Inner R/L G033-22-540
- Auto Trans w/Turbo R/L GS70-V9-050-9U  
Outer

- Inner R/L G063-22-540
- w/o Turbo
- Outer R/L GS50-V9-050-9U
- Inner R/L G043-22-540  
From 9-1-89 R/L G043-22-540A  
†Included w/Axle Shaft Assy
- 4 Shaft, Intermediate Man Trans w/Turbo G004-25-710B  
w/o Turbo G003-25-710D
- Auto Trans w/Turbo G005-25-710B  
w/o Turbo G003-25-710D
- 5 Bracket, Intermediate Shaft Man Trans w/Turbo G004-25-741A  
w/o Turbo G003-25-741A  
Auto Trans G008-25-741B  
G003-25-742A
- 6 Seal, Brkt Inner (a) To 2-1-90 99606-82063  
From 2-1-90 99606-82064  
(a) Included w/Intermediate Shaft Bracket
- 7 Seal, Brkt Outer (a) G0035-25-744A
- 8 Brg, Intermediate Brkt (a)


## FRONT STEERING LINKAGE/GEAR

### ENGINE SPEED SENSING 1988-89 W/O TURBO

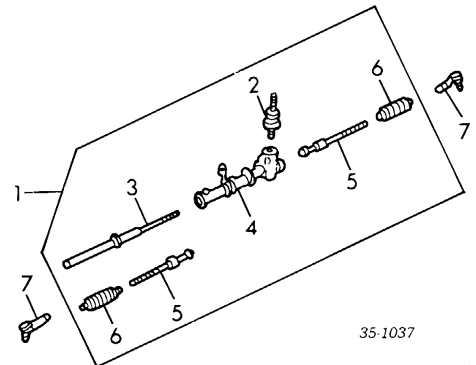

- 1 Gear Assy 2WS GJ22-32-110C  
4WS GJ22-32-110C
- 2 Pinion† GJ22-32-122A
- 3 Rack† GJ22-32-119
- 4 Housing† GJ22-32-120
- 5 Joint, Rack† 2WS GJ22-32-240  
4WS GJ22-32-240
- 6 Boot† GJ22-32-125  
†Included w/Gear Assy
- 7 End, Tie Rod R 8AH1-32-280  
L 8H1-32-280

### ENGINE SPEED SENSING 1988-89 W/TURBO

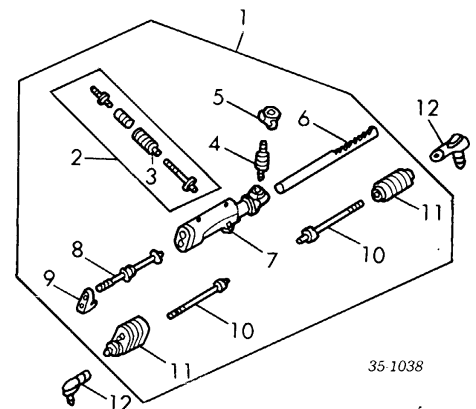


- 1 Gear Assy 2WS GM39-32-110C  
4WS GM39-32-110C
- 2 Pinion Assy, Output† G238-32-13X
- 3 Boot† (a) G309-32-125  
(a) Included w/Output Pinion Assy
- 4 Pinion† GK83-32-122
- 5 Housing, Valve† GK83-32-121
- 6 Rack† GK83-32-119
- 7 Housing, Gear† GK83-32-120

# MAZDA 626 1988-92

8 Rod, Piston†	G238-32-118A
9 Plate, Connecting†	
Man Trans	G238-32-136
Auto Trans	GM39-32-136
10 Joint, Rack†-Serviced w/Assy	
11 Boot†	R G238-32-126 L HE01-32-12X
†Included w/Gear Assy	
12 Joint Assy, Ball	8AH1-32-280


## 1988-89 VELOCITY SENSING

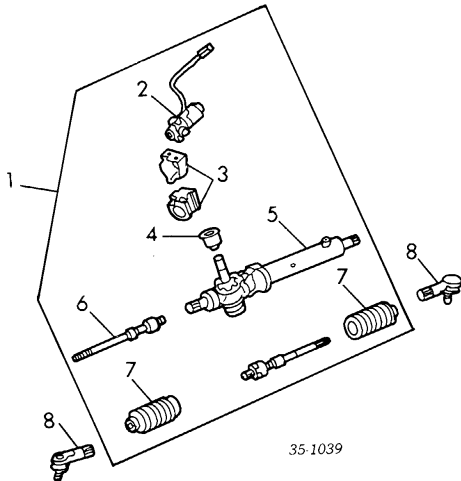

35-1039

1 Gear Assy	
2WS	
Man Trans	GJ25-32-110F
Auto Trans	GJ28-32-110F
4WS	
Man Trans	GJ25-32-110F
Auto Trans	GJ28-32-110F
2 Valve, Solenoid†	GJ25-32-420B
3 Bracket, Solenoid Valve†	GJ25-32-141
4 Cover, Lever†	GJ25-32-112
5 Housing, Gear†	
To Ch GD31A104070	GJ25-32-120
From Ch GD31A104074	GJ28-32-120
6 Joint, Rack†	R/L GJ22-32-240
7 Boot†	R/L GJ25-32-125A
†Included w/Gear Assy	
8 Joint, Ball	R/L 8AH1-32-280


## 1990-92 2WS

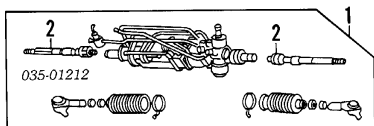

035-01212

1 Gear Assy	
w/Turbo	
To 11-1-89	GN55-32-110D
From 11-1-89	GN74-32-110A
w/o Turbo	
USA Built	GN81-32-110R-0B
Japan Built	GN52-32-110C
2 Joint, Rack†	R/L GJ22-32-240
†Included w/Gear Assy	

## 1990-92 4WS

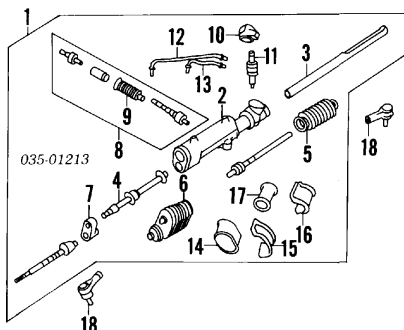

035-01213


1 Gear Assy	GM39-32-110C
2 Housing, Gear†	GK83-32-120

3 Rack, Steering Gear†	GK83-32-119
4 Rod, Piston Gear†	G238-32-118A
5 Boot, Outer Rack†	HE01-32-12X
6 Boot, Inner Rack†	G238-32-126
7 Plate, Connecting†	GM39-32-136
8 Pinion Kit, Output†	G238-32-13X
9 Boot, Pinion† (a)	G309-32-125
(a) Included w/Output Pinion Kit	
10 Housing, Valve†	GK83-32-121
11 Pinion, Strg Gear†	GK83-32-420
12 Pipe, Upper Pressure†	GK84-32-420
13 Pipe, Lower Pressure†	GK84-32-420
14 Mount, Rubber Right†	GK83-32-124
15 Plate, Clamp†	R G238-32-134
16 Plate, Clamp†	L GK83-32-130
17 Mount, Rubber Left†	G238-32-123
18 End, Tie Rod	R/L 8AH1-32-280
†Included w/Gear Assy	

## STEERING PUMP

Pump, Steering†	
2WS	
w/Turbo	GJ25-32-600D
w/o Turbo	G211-32-600E
4WS	GP34-32-600
†Order by Application	
Pulley, Pump	
2WS	88-89 GJ22-32-620A 90-92 GJ22-32-620B
4WS	88-89 GJ22-32-620A 90-92 GJ22-32-620B K805-15-908B
Belt, Drive	
Bracket Mounting	
2WS	GJ22-32-603A
4WS	G238-32-603A
Hose, Pressure†	GJ26-32-490B
Hose, Return†	GJ25-32-682A
†Order by Application	
Tank, Pwr Strg	
2WS	
w/Turbo	GJ25-32-690A
w/o Turbo	G211-32-690E
4WS	G238-32-690C
Bracket, Tank	GJ25-32-69X

## STEERING WHEEL/COLUMN

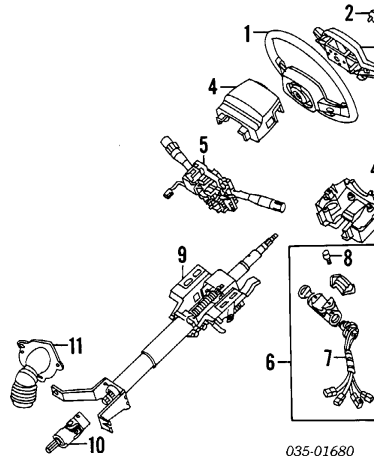


035-01680

1 Wheel, Steering†	
Urethane	GJ22-32-980C-96
Leather	GN53-32-980A-96
2 Cap, Horn†	
2WS	88-89 GJ22-32-800A 90-92 LA01-32-800B-96
4WS	88-89 GM39-32-800 90-92 GN58-32-800A-96
3 Pad, Horn†	
1988-89	GJ22-32-730-96
1990-92	
2WS	LA01-32-810-96
4WS	GN58-32-810-96
4 Cover, Lock Housing†	
1988-89	
Upper	GJ21-60-220-96
Lower	GJ21-60-230A-96
1990-92	
Man Trans	
Upper	GJ21-60-220-96
Lower	GJ25-60-230A-96
Auto Trans	
Upper	GN51-60-220-96
Lower	GN55-60-230A-96
†Dark Gray listed, Order by Color & Application	
19 Red; 43 Beige; 48 Blue; 71 Taupe; 96 Dark Gray	
5 Switch, Combination (a)	GJ28-66-120
(a) Order by Application	
6 Lock Assy, Ignition	
1988-89	GJ21-76-290
1990-92	
Man Trans	GJ21-76-290
Auto Trans	GN59-76-290


7 Switch, Ignition (b)	DA01-66-151
8 Bolt, Shear (b) (2)	H043-66-154
(b) Included w/Ignition Lock Assy	
9 Column, Steering	88-89 GJ21-32-100A 90-92 GN51-32-100B
10 Shaft Assy, Intermediate (a)	88-89 GJ21-32-090D 90-92 GJ21-32-090D
(a) Order by Application	
11 Cover, Lever (c)	
To 9-1-87	GJ21-32-411A
From 9-1-87	GJ21-32-40X
(c) Included w/Intermediate Shaft Assy	

## WINDSHIELD

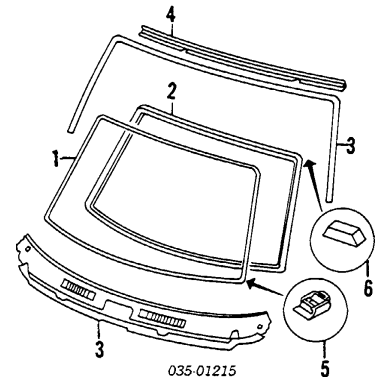

035-01215

1 Glass, Windshield	
Mazda (Tint)	
4 Door	
w/Sunshield	88-89 GJ30-63-901A 90-92 GN82-63-901A
w/o Sunshield	88-89 GJ29-63-901A 90-92 GN81-63-901A
5 Door	
w/Sunshield	88-89 GJ22-63-901C 90-91 GJ52-63-901C
w/o Sunshield	GJ21-63-901C
2 Weatherstrip, Glass	GA7B-50-899
3 Moulding, Reveal	
Upper	
4 Door	G212-50-601A
5 Door	
Chrome	GJ21-50-601A
Black	GJ75-50-601A
Lower	8AG2-50-604 GOOD-50-6B1
4 Retainer, Moulding	
Moulding, Inside Garnish† (a)	
4 Door	R GJ30-68-160A-48 L GJ30-68-170A-48
5 Door	R GJ37-68-160A-48 L GJ37-68-170A-48
†Includes Upper Center Pillar Trim & Roof Garnish	
(a) Light Blue/Blue listed, Order by Application	
19 Light Beige/Red; 43 Light Beige/Beige	
48 Light Blue/Blue; 96 Light Gray/Dark Gray	
5 Spacer, Lower	R/L GJ21-50-891
6 Spacer, Upper (2/Side)	R/L 8182-63-903
Mirror, Rear View†	GJ21-69-220-44
Visor, Sun†	R GJ37-69-270C-44 L GJ37-69-320C-44
†Light Blue listed, Order by Application	
06 Light Gray; 34 Taupe; 44 Light Blue; 93 Light Beige	

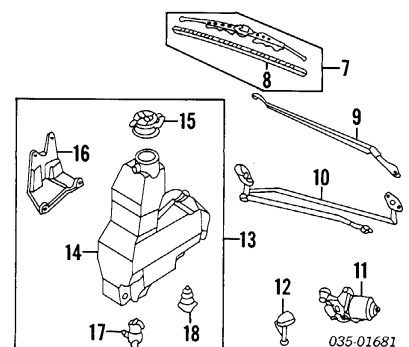

035-01681

7 Blade Assy, Wiper	R BJ0E-67-330-9U L HF06-67-330D-9U
8 Insert, Wiper†	R/L BC6B-67-333-9U
†Included w/Wiper Blade Assy	
9 Arm, Wiper	88-89 R GJ22-67-321A L GJ21-67-321A 90-92 R GJ22-67-321A L GJ21-67-321B
10 Link, Wiper	
4 Door	88-89 GK59-67-360 90-92 GK59-67-360

# MAZDA 626 1988-92

## WINDSHIELD Cont'd

5 Door	88-89 GJ83-67-360
	90-92 GK59-67-360
11 Motor, Wiper	GJ84-67-340A
12 Nozzle, Spray	R/L DB02-67-510
13 Reservoir Assy	
2WS	
USA Built	GJ21-67-480C
Japan Built	GJ26-67-480A
4WS	G239-67-480A
14 Tank, Reservoir	
2WS	
USA Built	GJ21-67-481B
Japan Built	GJ26-67-481
4WS	G239-67-481
15 Cap, Tank	
2WS	GJ21-67-483
4WS	G238-67-483
16 Bracket, Tank	
4WS	G238-67-485
17 Pump, Washer	
2WS	
USA Built	GJ21-67-482
Japan Built	GJ25-67-482
4WS	G238-67-482
18 Switch, Level	
2WS	
USA Built	GJ26-67-488
Japan Built	GJ26-67-488
4WS	G239-67-488

†Included w/Reservoir Assy

2 Support, Panel		GJ21-60-42YA
w/Active Restraints		GJ25-60-90YA
w/Passive Restraints		
3 Support, Center		GJ21-60-420
w/Active Restraints		GJ25-60-900
w/Passive Restraints		GJ25-64-270B-48
4 Panel, Center		
5 Panel, Lower		
Man Trans		GJ25-64-280C-48
Auto Trans		GN55-64-280B-48
		†Blue listed, Order by Application
		19 Red; 43 Beige; 48 Blue; 71 Taupe;
		96 Dark Gray
6 Trim, Center Panel		GJ23-55-210
7 Glove Box Assy		GJ25-64-260F-48
8 Lid, Glove Box (a)		GJ25-64-030E-48
9 Cover, Glove Box (a)		GJ25-64-111
10 Cover, Side (a)		R GJ25-64-267-48
		L GJ25-64-287-48
		†Blue listed, Order by Application
		19 Red; 43 Beige; 48 Blue; 71 Taupe; 96 Dark Gray
		(a) Included w/Glove Box Assy
11 Panel, Under		
USA Built		R GN81-64-521A
		L GN81-64-530
Japan Built		R GJ21-64-521B
		L GJ21-64-530B
Radio Set		
DX Model		88-89 0000-81-312G
		90-92 0000-81-843E
LX Model		R 0000-81-312G
		L 0000-81-853E
Deck, Cassette		
DX Model		0000-81-371G
LX Model		0000-81-490G
Equalizer		88-89 0000-81-122G
		90-92 0000-81-128T
Speaker, Front		R/L 0000-81-2142-01

†Order by Application

16 Plate, Upper		GJ23-64-430B-96
17 Panel, Switch		GJ21-64-323A-96
		†Dark Gray listed, Order by Application
		19 Red; 43 Beige; 48 Blue; 71 Taupe; 96 Dark Gray

## W/O ARMREST

035-02689

1 Console, Front		GJ23-64-320B-96
2 Console, Rear		GJ21-64-42YA-96
3 Plate, Upper		GJ21-64-430-02
4 Panel, Switch		GJ21-64-323A-96
5 Ashtray		G030-64-660
		†Dark Gray listed, Order by Application
		19 Red; 43 Beige; 48 Blue; 96 Dark Gray
6 Indicator		GJ24-64-350C
7 Bracket, Console		GJ21-64-416

## COWL & DASH

035-01682

1 Panel, Cowl Top		GJ21-70-610G
2 Baffle, Cowl		R GJ21-56-352
		L GJ21-56-362
		GJ21-53-510N
3 Panel, Dash Upper		
4 Panel, Dash Lower		
USA Built		GJ51-53-400C
Japan Built		GJ21-53-400E
5 Gusset, Dash Panel		
4 Door		R G211-70-0X0
		L G211-71-0X0A
5 Door		R GJ21-70-0X0
		L GJ21-71-0X0
6 Crossmember, Lower		
2WS		GJ21-53-450F
4WS		GM39-53-450B

## CENTER CONSOLE

### W/ARMREST

035-02688

1 Console, Front		
Man Trans		GJ21-64-320B-96
1988-89		
1990-92		G392-64-320A-96
Leather		GN51-64-320A-96
Urethane		GN52-64-320A-96
Auto Trans		
2 Console Assy, Rear		
w/Cassette Case		GJ23-64-420J-96
w/Active Restraints		GJ25-64-420C-96
w/Passive Restraints		GJ33-64-420C-96
w/o Cassette Case		GJ23-64-450A-96
3 Lid Assy, Rear Console (a)		GJ23-64-46Z-96
4 Knob, Console Lid (a) (b)		GJ23-64-46Y-96
5 Hinge, Console Lid (a) (b)		
		†Dark Gray listed, Order by Application
		19 Red; 43 Beige; 48 Blue; 71 Taupe; 96 Dark Gray
6 Lock, Console Lid (a) (b)		GJ23-64-46X
		(b) Included w/Rear Console Lid Assy
7 Tray, Console (a)		
w/Cassette Case		CJ23-64-442-96
w/o Cassette Case		CJ33-64-442-96
8 Ashtray Assy (a)		GJ21-64-660-96
9 Case, Inner Ashtray (a) (b)		GJ21-64-680-96
		†Dark Gray listed, Order by Application
		19 Red; 43 Beige; 48 Blue; 71 Taupe; 96 Dark Gray
		(b) Included w/Ashtray Assy
10 Box, Console (a)		88-89 GJ23-64-441A
		90-92 GJ25-64-441
11 Plate, Stopper (a)		GJ23-64-459
12 Bracket, Hinge (a)		GJ23-64-457
13 Bracket, Front (a)		
w/Cassette Case		GJ23-64-443
w/o Cassette Case		GJ33-64-443
14 Bracket, Rear (a)		GJ33-64-446
		(a) Included w/Rear Console Assy
15 Indicator		88-89 GJ24-64-350C
		90-92 GN52-64-350A

## ROCKER/PILLARS/FLOOR

†Time is to Cut at Dotted Line in Illustration

035-02013

1 Panel, Cowl Side		R GJ21-70-020C
		L GJ21-71-020C
Panel, Cowl Trim		R GJ21-68-370A-48
		L GJ21-68-390-48
		†Blue listed, Order by Application
		19 Red; 43 Beige; 48 Blue; 71 Taupe; 96 Dark Gray
2 Pillar, Lower Hinge		R GJ21-70-230
		L GJ21-71-230
3 Pillar, Upper Outer Hinge		
4 Door		R G211-70-220B
		L G211-71-220B
5 Door		R G225-70-220A
		L G225-71-220A
4 Pillar, Upper Inner Hinge		
4 Door		R G211-70-240
		L G211-71-240A
5 Door		R G225-70-240
		L G225-71-240
5 Brkt, Inst Panel		R/L GJ21-71-260
6 Pillar, Outer Center		
4 Door		R GJY9-70-350
		L GJY9-71-350
5 Door		R GJY7-70-350
		L GJY7-71-350
7 Reinf, Center Pillar		
4 Door		R GJ29-70-365
		L GJ29-71-365
5 Door		R GJ27-70-360B
		L GL27-71-360B
8 Pillar, Inner Center		
4 Door		R GJ29-70-080C
		L GJ29-71-080B
5 Door		R GJ37-70-080B
		L GJ37-71-080B
Moulding, Center Pillar		
4 Door		R G211-50-8E0
		L G211-50-8F0
5 Door		R G225-50-8E0
		L G225-50-8F0
Panel, Pillar Inner Trim		
Upper-See Windshield Section		
Lower		R GJ29-68-220-48
		L GJ33-68-230-48
		†Blue listed, Order by Application
		19 Red; 43 Beige; 48 Blue; 71 Taupe; 96 Dark Gray
Panel, Rocker Outer		
9 Front		R G211-70-27X

## INSTRUMENT PANEL


035-01442

1 Panel, Instrument		GJ21-60-350-48
		†Blue listed, Order by Application
		19 Red; 43 Beige; 48 Blue; 71 Taupe; 96 Dark Gray
Hood, Meter (a)		GK02-55-420C
		(a) Order by Application



# MAZDA 626 1988-92

- 10 Rear 4 Door L G211-71-27X
  - 5 Door R GJY9-70-270A  
L GJY9-71-270A
  - 11 Reinf, Rocker R GJY7-70-270A  
L GJY7-71-270A
  - Plate, Front Scuff R G211-70-281A  
L G211-71-281A
  - Plate, Front Scuff R G211-68-710A-48  
L G211-68-720A-48
  - Plate, Rear Scuff R G211-68-730A-48  
L G211-68-740A-48
- ¶Blue listed, Order by Application  
19 Red; 43 Beige; 48 Blue; 71 Taupe; 96 Dark Gray

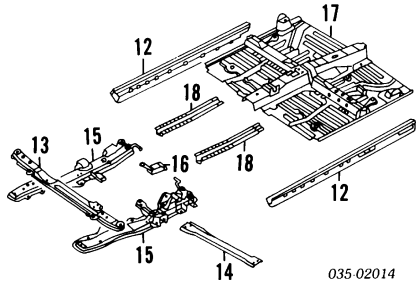

- 12 Panel, Rocker Inner R GJ29-53-950  
L GJ29-54-950
- 13 Crossmember, Front GP34-34-850
- 14 Crossmember, Rear G309-34-861A
- 15 Frame, Front 2WS R GJ21-34-810H  
L GJ21-34-820H
- 4WS Man Trans R G309-34-810C  
L G309-34-820D
- Auto Trans R G238-34-810E  
L GJ21-34-820H
- 16 Damper, Dynamic GJ83-34-990
- 17 Pan, Front Floor 2WS GJ21-53-600D  
4WS USA Built GJ21-53-600D  
Japan Built GM39-53-600
- 18 Frame, Front Floor R GJ21-53-680C  
L GJ21-54-660B


## FRONT SEAT

- Adjuster, Seat Track 4 Door R GK87-88-60X  
L GK87-88-61X
- LX, 4WS, Turbo Model R GK87-88-60X  
L GK88-88-61XA
- 5 Door R GK94-88-60X  
L GJ22-88-61XA
- Adjuster, Recline Driver Side R GK87-88-101  
L GJ21-88-10Y
- Passenger Side R GJ21-88-15Y  
L GJ21-88-151

## REAR SEAT


## SEAT BELTS

### FRONT ACTIVE RESTRAINT

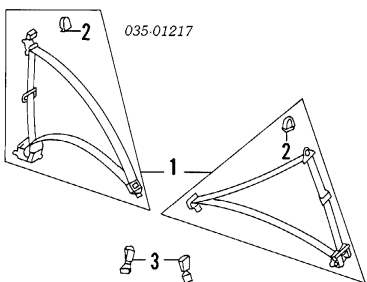


- 1 Retractor R GJ30-57-630C-48  
L GJ35-57-980B-48
  - 2 Cover, Anchor R GJ30-57-631A-48  
L GJ30-57-691-48
  - 3 Buckle R GJ21-57-620C-48  
L GJ21-57-680D-48
- ¶Blue listed, Order by Application  
19 Red; 43 Beige; 48 Blue; 71 Taupe; 96 Dark Gray

## FRONT PASSIVE RESTRAINT

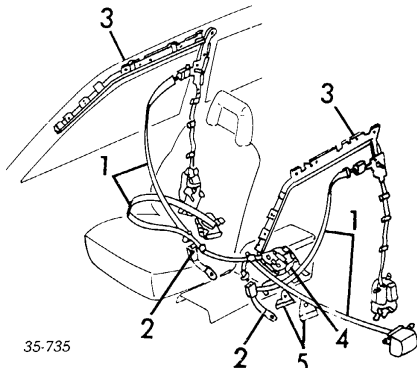

- 1 Belt, Seat R GJ30-57-630C-48  
L GJ35-57-980B-48
  - 2 Buckle R GJ25-57-620D-48  
L GJ25-57-680E-48
  - 3 Slide R GJ35-57-930E  
L GJ35-57-990E
  - 4 Retractor, Center GN60-57-920-48
  - 5 Brkt, Retractor R GJ25-57-925B  
L GN60-57-995
- ¶Blue listed, Order by Application  
19 Red; 43 Beige; 48 Blue; 71 Taupe; 96 Dark Gray
- ¶Order by Application  
19 Red; 43 Beige; 48 Blue; 71 Taupe; 96 Dark Gray

## REAR

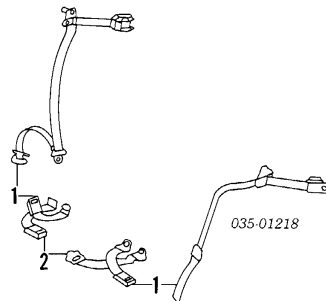


- 1 Retractor R/L GJ30-57-770E-48
  - 2 Belt, Center GJ21-57-740-48
- ¶Blue listed, Order by Application  
19 Red; 43 Beige; 48 Blue; 96 Dark Gray; 71 Taupe

## FRONT DOOR

### SHEET METAL

- Shell Assy, Door 4 Door R GJY9-58-020A  
L GJY9-59-020A
  - 5 Door R GJY7-58-020  
L GJY7-59-020
  - Panel, Door Repair USA Built To 6-3-91 R GJ29-58-031A  
L GJ29-59-031A
  - From 6-3-91 R GJ29-58-031A  
L GJ29-59-031A
  - Japan Built R GJ29-58-031A  
L GJ29-59-031A
- ¶Included w/Door Shell Assy

## EXTERIOR TRIM

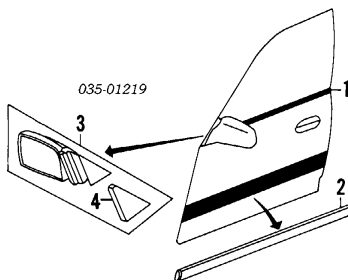

- 1 Moulding Assy, Belt Chrome R G211-50-640D  
L G211-50-650C


- Black R GM66-50-640B  
L GM66-50-650B
  - Protector, Belt Moulding Front R G211-50-644  
L G211-50-654
  - Rear R G211-50-645A  
L G211-50-655A
- ¶Included w/Belt Moulding Assy

- 2 Moulding, Side Adhesive 1988-89 R GN81-50-682  
L GN81-50-692
- 1990-92 USA Built R GN81-50-682  
L GN81-50-692
- Japan Built Black R G212-50-682  
L G212-50-692
- Body Color R G243-50-682-59  
L G243-50-692-59

¶Blue listed, Order by Application  
UC Crystal White/Silver; PZ Brilliant Black/Silver;  
SQ Blaze Red/Silver; 6L Graceful Red/Silver;  
NU Vintage Red/Silver; 5N Brave Blue/Silver;  
6S Exceed Green/Silver; 1H Steel Gray/Silver;  
3L Silver Stone/Silver


- 3 Mirror Assy, Rear View R GJ30-69-110C  
L GJ30-69-170C
  - 4 Cover, Mirror Mount (a) R GJ30-69-111  
L GJ30-69-171
- (a) Included w/Rear View Mirror Assy

## INTERIOR TRIM

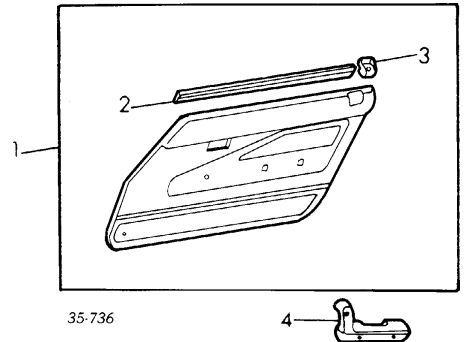

- 1 Panel Assy, Trim Vinyl R GJ29-68-420B-48  
L GJ29-68-450B-48
  - Cloth R GJ30-68-420B-48  
L GJ30-68-450B-48
  - ¶Order by Application  
19 Red; 43 Beige; 48 Blue; 71 Taupe; 96 Dark Gray
  - 2 Weatherstrip, Inner (a) R G211-58-821A  
L G211-59-821A
  - 3 Trim, Lock (a) R/L GJ21-68-421A-48
  - Pocket, Map (a) (b) R GJ30-68-4C0A-48  
L GJ29-68-455-48
  - Handle, Pull (a) (b) R G214-68-4A4-48  
L G214-68-4A5-48
- (a) Included w/Trim Panel Assy  
(b) For Cloth Trim Panel
- 4 Armrest (c) R BF70-69-370C-48  
L BF70-69-390C-48
- ¶Blue listed, Order by Application  
19 Red; 43 Beige; 48 Blue; 71 Taupe; 96 Dark Gray  
(c) For Vinyl Trim Panel


## HARDWARE

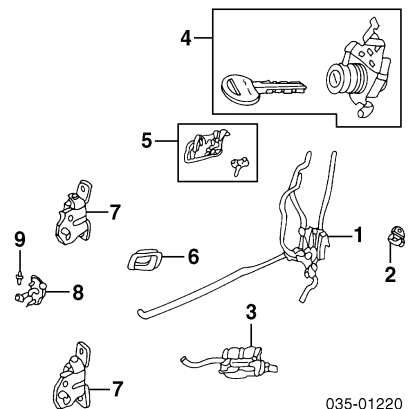

- 1 Latch


# MAZDA 626 1988-92


FRONT DOOR Cont'd	
<b>HARDWARE Cont'd</b>	
w/Theft Deterrent	R GJ30-58-310A L GJ32-59-310A
w/o Theft Deterrent	R GN54-58-310B L GJ30-59-310A
*Order by Application	
<b>Striker, Latch</b>	R/L B001-58-361A
<b>3 Actuator, Power Lock</b>	R/L GJ29-58-350C
<b>4 Cylinder w/Key</b>	
w/Theft Deterrent	R GJ30-76-210 L GJ30-76-220
w/o Theft Deterrent	R GJ29-76-210C L GJ29-76-220C
<b>5 Handle, Outside</b>	
Chrome	R G211-58-410C L G211-59-410C
Body Color (a)	R G212-58-410C-UC L G212-59-410C-UC
(a) White listed, Order by Application UC Crystal White/Silver; PZ Brilliant Black/Silver; SQ Blaze Red/Silver; 6L Graceful Red/Silver; NU Vintage Red/Silver; 5N Brave Blue/Silver; 6S Exceed Green/Silver; 1H Steel Gray/Silver; 3L Silver Stone/Silver	
<b>Joint, Connecting</b>	R/L H043-72-411
<b>6 Handle, Inside</b>	R H260-72-330A-48 L H260-73-330A-48
*Blue listed, Order by Application 19 Red; 43 Beige; 48 Blue; 71 Taupe; 96 Dark Gray	
<b>7 Hinge</b>	
Upper	R/L G00D-59-240B
Lower	R/L G00D-58-240A
<b>8 Check, Door</b>	R/L G211-58-270
<b>9 Pin, Check</b>	R/L H260-58-265C
<b>W/Strip, On Door</b>	
Lower	R G211-58-76X L G211-59-76X
<b>W/Strip on Body</b>	
4 Door	R G211-58-760 L G211-59-760
5 Door	R G225-58-760 L G225-59-760
<b>Welt, Seaming</b>	
4 Door	R GJ33-68-911A-48 L GJ33-68-912B-48
5 Door	R GJ37-68-911A-48 L GJ37-68-912A-48
*Blue listed, Order by Application 19 Red; 43 Beige; 48 Blue; 71 Taupe; 96 Dark Gray	

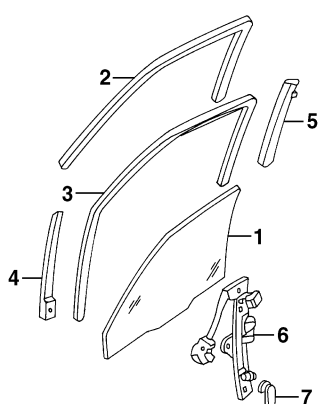GLASS & PARTS	
 <p>035-00737</p>	
<b>1 Glass, Front Door</b>	
Mazda (Tint)	R G211-58-510E L G211-59-510E
4 Door	R G225-58-510E L G225-59-510E
5 Door	
<b>2 Weatherstrip, Glass</b>	
4 Door	R G211-58-76YA L G211-59-76YA
5 Door	R G225-58-76YA L G225-59-76YA
<b>3 Run, Glass</b>	
4 Door	R G211-58-605B L G211-59-605B
5 Door	R G225-58-605B L G225-59-605B
<b>4 Guide, Front</b>	
4 Door	R G211-58-601 L G211-59-601
5 Door	R GJ21-58-601B L GJ21-59-601B
<b>5 Guide, Rear</b>	
4 Door	R G211-58-61Y L G211-59-61Y
5 Door	R G225-58-61Y L G225-59-61Y
<b>6 Regulator Assy</b>	
Manual	R G211-58-560B


Power	L G211-59-560B
4 Door	R G212-58-560E L H261-59-598
5 Door	R G226-58-560C L G226-59-560C
<b>7 Handle, Regulator (a)</b>	R/L B092-58-580-48
(a) Blue listed, Order by Application 19 Red; 43 Beige; 48 Blue; 71 Taupe; 96 Dark Gray	
<b>Motor, Regulator</b>	R G212-58-560E L H261-59-598
<b>Guide, Regulator</b>	
4 Door	R G212-58-590 L H261-59-598
5 Door	R G226-58-590 L G226-59-590
*Included w/Power Regulator Assy	

REAR DOOR	
SHEET METAL	
<b>Shell Assy, Door</b>	
4 Door	R GJY9-72-020A L GJY9-73-020A
5 Door	R GJY7-72-020 L GJY7-73-020
<b>Panel, Door Repair</b>	
USA Built	R G00D-72-031 L G00D-73-031
To 6-3-91	R G00D-72-031 L G00D-73-031
From 6-3-91	R G00D-72-031 L G00D-73-031
Japan Built	R G00D-72-031 L G00D-73-031
*Included w/Door Shell Assy	

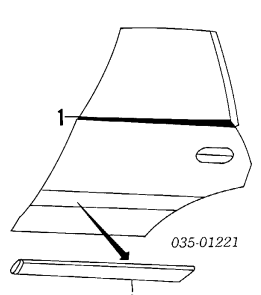EXTERIOR TRIM	
 <p>035-01221</p>	
<b>1 Moulding Assy, Belt</b>	R G211-50-660D L G211-50-670D
<b>Protector, Belt Moulding</b>	
Front	R G211-50-664 L G211-50-674
Rear	R G211-50-665 L G211-50-675
*Included w/Belt Moulding Assy	
<b>2 Moulding, Side</b>	
Adhesive	
1988-89	R GN81-50-683 L GN81-50-693
1990-92	
USA Built	R GN81-50-683 L GN81-50-693
Japan Built	
Chrome	R G212-50-683 L G212-50-693
Body Color	R G243-50-683-04 L G243-50-693-04
*Black/Silver listed, Order by Application UC Crystal White/Silver; PZ Brilliant Black/Silver; SQ Blaze Red/Silver; 6L Graceful Red/Silver; NU Vintage Red/Silver; 5N Brave Blue/Silver; 6S Exceed Green/Silver; 1H Steel Gray/Silver; 3L Silver Stone/Silver	
<b>Nameplate</b>	
"4 WS"	G238-51-762

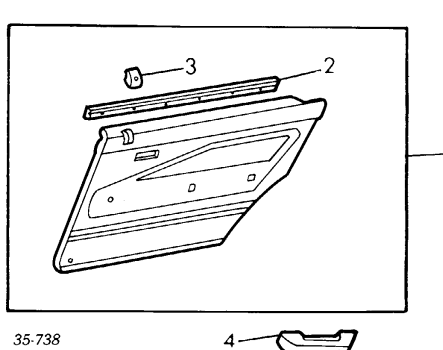INTERIOR TRIM	
 <p>35-738</p>	

<b>1 Panel Assy, Trim</b>	
Vinyl	R GJ29-68-520A-48 L GJ29-68-550A-48
Cloth	R GJ30-68-520C-48 L GJ30-68-550A-48
*Blue listed, Order by Application 19 Red; 43 Beige; 48 Blue; 71 Taupe; 96 Dark Gray	
<b>2 Weatherstrip, Inner (a)</b>	R G211-72-821B L G211-73-821B
<b>3 Vessel, Inner Lock (a)</b>	R/L GJ21-68-421A-48
<b>Handle, Pull (a) (b)</b>	R/L B110-68-435-48
*Blue listed, Order by Application	
<b>Lamp, Courtesy (a) (b)</b>	R G211-51-4D0A L G211-51-4C0A
(a) Included w/Trim Panel Assy (b) For Cloth Trim Panel	
<b>4 Armrest (c)</b>	R/L B100-69-37X-48
*Blue listed, Order by Application 19 Red; 43 Beige; 48 Blue; 71 Taupe; 96 Dark Gray	
(c) For Vinyl Trim Panel Only	

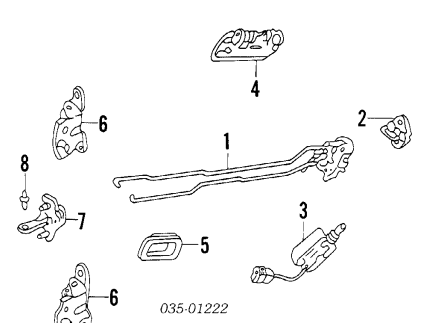HARDWARE	
 <p>035-01222</p>	
<b>1 Latch</b>	
DX Model	R G211-72-310C L G211-73-310C
LX Model	R GJ32-72-310C L GJ32-73-310C
*Order by Application	
<b>Striker, Latch</b>	R/L B001-58-361A
<b>3 Actuator, Power Lock</b>	R G212-72-350A L G212-73-350B
<b>4 Handle, Outside</b>	
Chrome	R G211-72-410B L G211-73-410B
Body Color	R G212-72-410A-5N L G212-73-410A-5N
*Blue listed, Order by Application 19 Red; 43 Beige; 48 Blue; 71 Taupe; 96 Dark Gray	
<b>5 Handle, Inside</b>	R H260-72-330A-48 L H260-73-330A-48
*Blue listed, Order by Application 19 Red; 43 Beige; 48 Blue; 71 Taupe; 96 Dark Gray	
<b>6 Hinge</b>	
Upper	R G211-72-210B L G211-73-210A
Lower	R G030-72-240 L G030-73-240
<b>7 Check, Door</b>	R/L G211-72-270A
<b>8 Pin, Check</b>	R/L H260-58-265C
<b>W/Strip, On Door</b>	R/L G211-72-76X
<b>W/Strip, On Body</b>	
4 Door	R G211-72-760D L G211-73-760D
5 Door	R G225-72-760C L G225-73-760C
<b>Welt, Seaming</b>	
4 Door	R GJ33-68-921A-48 L GJ33-68-922A-48
5 Door	R GJ37-68-921A-48 L GJ37-68-922A-48
*Blue listed, Order by Application 19 Red; 43 Beige; 48 Blue; 71 Taupe; 96 Dark Gray	

GLASS & PARTS	
<p>Illustration Located in Next Column</p>	
<b>1 Glass, Rear Door</b>	
Mazda (Tint)	R G211-72-510F L G211-73-510F
4 Door	R G225-72-510F L G225-73-510F
5 Door	
<b>2 Weatherstrip, Glass</b>	
4 Door	R G211-72-76YC L G211-73-76YC
5 Door	R G225-72-76YC L G225-73-76YC
<b>3 Run, Glass</b>	

150



Labor Times Shown are for Replacement with New OEM Undamaged Parts on New Undamaged Vehicles.  
Comments or suggestions? Need assistance? Call 1-800-854-7030 or 858-578-6550. Ext. 8220. Fax 1-888-256-7969 or 858-549-0629.

madp1\_g01\_

# MAZDA 626 1988-92

## SUNROOF

1988-89

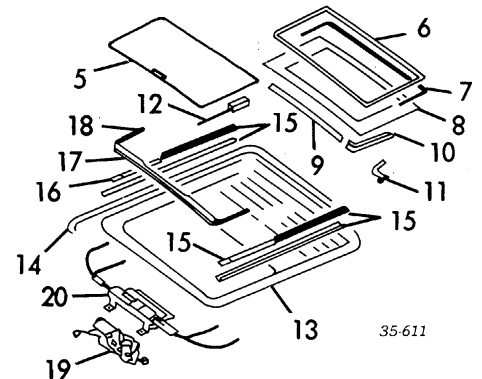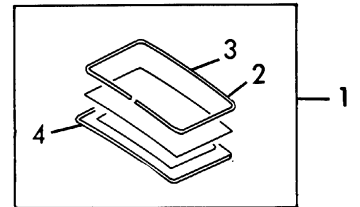


- 1 **Panel Assy, Sliding**  
Steel Sunroof GJ24-69-810A  
Glass Sunroof GJ22-69-810C
- 2 **Panel, Sliding**—Serviced w/Sliding Panel Assy
- 3 **Weatherstrip, Panel**  
Steel Sunroof GJ24-69-825A  
Glass Sunroof GJ22-69-825
- 4 **Retainer, W/Strip**—Serviced w/Sliding Panel Assy  
\*Included w/Sliding Panel Assy
- 5 **Sunshade (a)** 88-89 GJ52-69-891B-44  
90-92 GJ22-69-891D-44
- 6 **Welt, Seaming (a)** GJ22-69-981A-44  
(a) Light Blue listed, Order by Application  
06 Light Gray; 44 Light Blue; 34 Light Taupe;  
93 Light Beige
- 7 **Rail, Drip** R/L G034-69-856A
- 8 **Panel, Lower Cover, Lower Panel** G034-69-838B
- 9 **Center** GJ22-69-893
- 10 **Side** R GJ22-69-983A  
L GJ22-69-984A
- Guide, Sunroof Panel**
- 11 **Front** R G034-69-839A  
L G034-69-841A
- 12 **Rear**  
Steel Sunroof R G034-69-842A  
L G034-69-843A  
Glass Sunroof R G038-69-842A  
L G038-69-843A
- 13 **Frame, Sliding Roof**  
w/Active Restraints GJ22-69-840  
w/Passive Restraints GJ26-69-840
- 14 **Seal, Frame**—Serviced w/Frame Assy
- 15 **Rail, Guide**  
Steel Sunroof R G034-69-842A  
L G034-69-843A  
Glass Sunroof R G038-69-842A  
L G038-69-843A
- 16 **Cover, Guide Rail**  
Steel Sunroof R G034-69-834A  
L G034-69-835A  
Glass Sunroof R/L G040-69-834-5  
G034-69-845
- 17 **Deflector** R/L G034-69-846-7
- 18 **Link, Deflector** G117-69-848A
- 19 **Motor, Sliding Roof** GJ22-69-861
- 20 **Bracket, Drive Unit Handle, Sliding Roof** B004-69-855A

1990-92

Illustration Located in Next Column

- 1 **Panel, Lower Glass, Sunroof** G034-69-838B  
GJ22-69-810C
- 2 **Welt, Seaming** GJ22-69-981A-44  
\*Blue listed, Order by Application  
06 Light Gray; 19 Red; 34 Light Taupe;  
44 Light Blue
- 3 **Rail, Drip** G034-69-856A
- 4 **Cover, Lower Panel** GJ22-69-893
- 5 **Cover, Decoration** R GJ22-69-983A

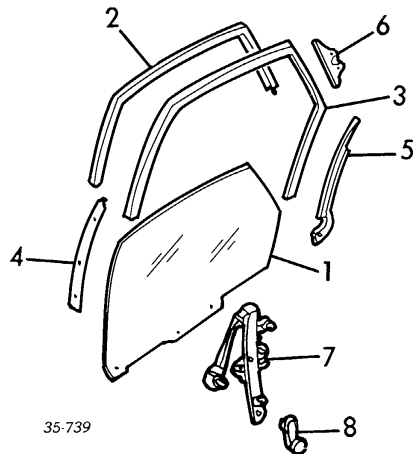


35-739

- 4 Door R G211-72-605C  
L G211-73-605C
  - 5 Door R G225-72-605C  
L G225-73-605C
  - 4 **Guide, Front**  
4 Door R G211-72-607A  
L G211-73-607A
  - 5 Door R G225-72-607A  
L G225-73-607A
  - 5 **Guide, Rear**  
4 Door R G211-72-603A  
L G211-73-603A
  - 5 Door R G225-72-603B  
L G225-73-603B
  - 6 **Bracket, Corner**  
4 Door R G212-72-621A  
L G212-73-621A
  - 5 Door R G226-72-621A  
L G226-73-621A
  - 7 **Regulator Assy**  
Manual R G211-72-560A  
L G211-73-560B
  - Power R G212-72-560E  
4 Door L G212-73-560E
  - 5 Door R G226-72-560E  
L G226-73-560E
  - 8 **Handle, Regulator (a)** R/L B092-58-580-48  
(a) Blue listed, Order by Application  
19 Red; 43 Beige; 48 Blue; 71 Taupe; 96 Dark Gray
  - Motor, Regulator**  
4 Door R G212-72-58XA  
L G212-73-580E
  - 5 Door R G226-72-58X  
L G212-73-58XA
- \*Included w/Power Regulator Assy

## ROOF

### SHEET METAL/EXTERIOR TRIM

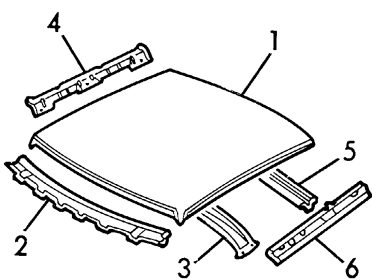


35-740

- 1 **Panel, Roof**  
w/Sunroof GJY0-70-600  
4 Door GJY8-70-600  
5 Door
- w/o Sunroof GJY9-70-600  
4 Door GJY7-70-600  
5 Door
- Rail, Drip**
- 4 Door Front R G211-70-311  
L G211-71-311
- Rear R G211-70-312  
L G211-71-312
- 5 Door Front R G225-70-311  
L G225-71-311
- Rear R G225-70-312  
L G225-71-312
- Moulding, Drip Rail**
- 4 Door R 8AG1-50-511

- 5 Door L 8AG1-50-531  
R 8AG2-50-511  
L 8AG2-50-531
- 2 **Header, Front**  
4 Door G211-70-640  
5 Door GJ21-70-640
- 3 **Bow, Center**  
w/o Sunroof G211-70-661A  
4 Door GJ21-70-661
- 5 Door
- 4 **Reinforcement, Sunroof**  
4 Door R G214-70-620A  
L G214-71-620A
- 5 Door R G228-70-620C  
L G228-71-620C
- 5 **Header, Rear**  
4 Door G211-70-701  
5 Door G225-70-700A
- Rail, Roof Outer Side**—See Quarter Panel Section  
\*Serviced w/Outer Quarter Panel
- 6 **Rail, Roof Inner Side**  
4 Door R GJ29-70-050C  
L GJ29-71-050D
- 5 Door R GJ37-70-050A  
L GJ37-71-050B
- Mast, Antenna**  
Manual 0000-81-0624  
Power 0000-81-0528-SD  
4 Door 0000-81-0528-CR  
5 Door 0000-81-0529
- Motor, Antenna**


## INTERIOR TRIM

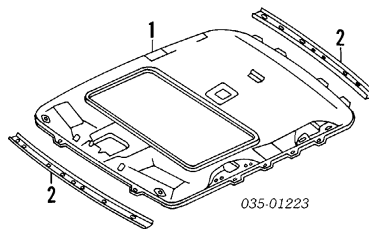

035-01223

- 1 **Headliner**  
4 Door w/Sunroof 88-89 GJ34-68-030-44  
90-92 GN54-68-030A-43
  - w/o Sunroof 88-89 GJ33-68-030D-44  
90-92 GN52-68-030A-43
  - 5 Door w/Sunroof 88-89 GJ38-68-030-44  
90-92 GN37-68-030-43
  - w/o Sunroof 88-89 GJ37-68-030-44  
90-92 GJ37-68-030D-43
  - 2 **Moulding, Finish**  
Front G211-68-090-44  
4 Door GJ21-68-090-44  
5 Door
  - Rear Side—See Windshield Section
  - Rear G211-68-130-44  
4 Door G225-68-130-44  
5 Door
- \*Light Blue listed, Order by Application  
04 Light Gray; 44 Light Blue; 84 Light Taupe;  
93 Light Beige

## OVERHEAD CONSOLE

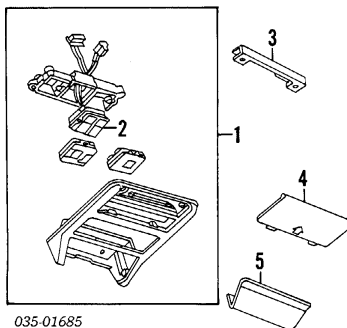


035-01685

- 1 **Console Assy, Overhead** GJ21-69-870-06  
\*Light Gray listed, Order by Application  
06 Light Gray; 19 Red; 34 Light Taupe;  
44 Light Blue; 93 Light Beige
  - 2 **Switch, Sliding Roof (a)** G117-69-87X  
(a) Included w/Overhead Console Assy
  - 3 **Bracket, Console** G034-69-851A
  - 4 **Cover, Console Front** GJ21-69-886-06
  - 5 **Cover, Console Rear** GJ21-69-887-06
- \*Light Gray listed, Order by Application  
06 Light Gray; 19 Red; 34 Light Taupe;  
44 Light Blue; 93 Light Beige

# MAZDA 626 1988-92

## SUNROOF Cont'd


1990-92 Cont'd

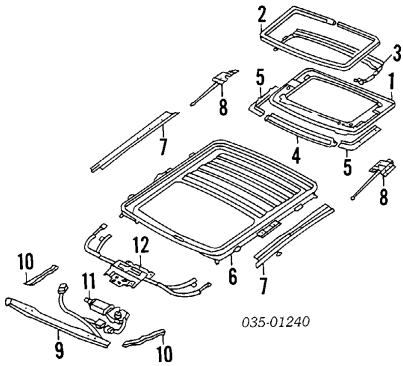

035-01240



- 6 Frame, Sliding Roof L GJ22-69-984A  
GJ26-69-840
- 7 Rail, Guide R G038-69-832A  
L G038-69-833A
- 8 Guide, Rear R G038-69-842A  
L G038-69-843A
- 9 Deflector G034-69-845
- 10 Link, Deflector R/L G034-69-846-7
- 11 Motor, Sunroof G117-69-848A
- 12 Brkt, Drive Unit GJ22-69-861

## BACK WINDOW

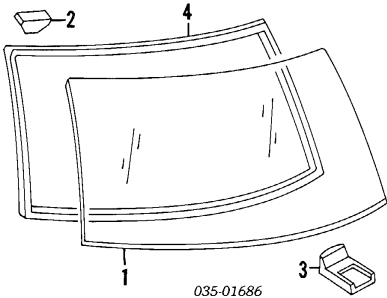

035-01686

- 1 Glass, Back Window Mazda (Tint) USA Built GN81-63-931  
Japan Built G211-63-931A
- 2 Spacer, Glass (4) GJ51-50-897
- 3 Spacer, Glass Lower (2) GJ51-50-891
- 4 Weatherstrip, Glass GA7B-50-899

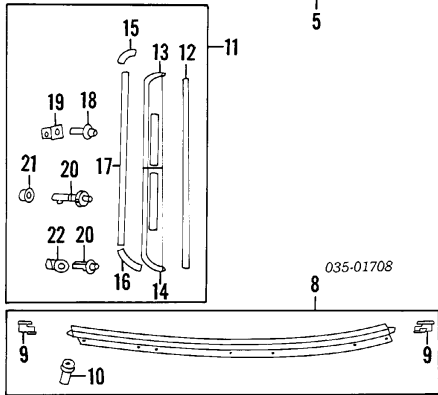


035-01708

- 5 Moulding Assy, Upper Reveal USA Built To 8-30-90 8AG1-50-611  
From 8-30-90 8AG9-50-611  
Japan Built 8AG1-50-611
- 6 Clip, Mldg (7) B092-50-609
- 7 Clip, Mldg (4) GJ21-50-6G8  
*†Included w/Upper Reveal Moulding Assy*
- 8 Moulding Assy, Lower Reveal 8AG1-50-614
- 9 Cap, Mldg (a) R G211-50-6G1  
L G211-50-6G2
- 10 Grommet, Lower Mldg (a) (6) H260-50-6K8  
*(a) Included w/Lower Reveal Moulding Assy*

- 11 Moulding Assy, Side R/L 8AG1-50-612-3
- 12 Retainer (b) R G211-50-6H5  
L G211-50-6H6
- 13 Bracket, Upper Side (b) R G211-50-6J2  
L G211-50-6J3
- 14 Bracket, Lower Side (b) R G211-50-6J4  
L G211-50-6J5
- 15 Mldg, Upper Corner (b) R G211-50-6H1A  
L G211-50-6H2A
- 16 Mldg, Lower Corner (b) R G211-50-6H3A  
L G211-50-6H4A
- 17 Mldg, Outer (b) R/L G211-50-6H7
- 18 Bolt (b) (2/Side) R/L G211-50-6L7
- 19 Gasket (b) (2/Side) R/L B092-50-816
- 20 Fastener (b) (2/Side) R/L B130-51-918
- 21 Fastener (b) R/L G211-50-6L5
- 22 Fastener (b) R/L B130-51-919  
*(b) Included w/Side Moulding Assy*

## QUARTER PANEL


### SHEET METAL 4 DOOR

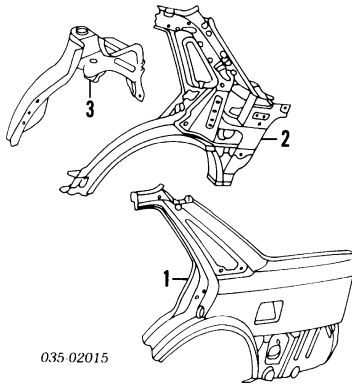

035-02015

- 1 Panel, Outer Quarter R GJY9-70-41XB  
L GJY9-71-41XB  
Door, Fuel G211-42-410A
- 2 Panel, Inner R GJ29-70-110A  
L GJ29-71-110A
- 3 Panel, Wheelhouse USA Built R GJ23-70-150H  
To 3-8-90 L GJ23-71-150F  
From 3-8-90 R GJ23-70-150H  
L GJ23-71-150F  
Japan Built R G211-70-150D  
L G211-71-150E

### INTERIOR TRIM 4 DOOR

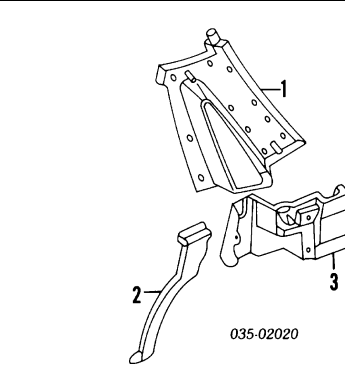


035-02020

- 1 Panel, Trim Upper (†) R GN81-68-250B-44  
L GK59-68-260-44
- 2 Wheelhouse (†) R G211-68-760A-48  
L G211-68-780A-48
- 3 Trim, Trunk Side (†) R G212-68-850-48  
L G212-68-870-48  
GJ29-68-310D-48
- Trim, Package Tray (†) †Blue listed, Order by Application
- Speaker, Rear (†) R/L 0000-81-2142-01  
*†Order by Application  
19 Red; 43 Beige; 48 Blue; 71 Taupe; 96 Dark Gray*

### SHEET METAL 5 DOOR

Illustration Located in Next Column


- 1 Panel, Outer Quarter R GJY7-70-41XA

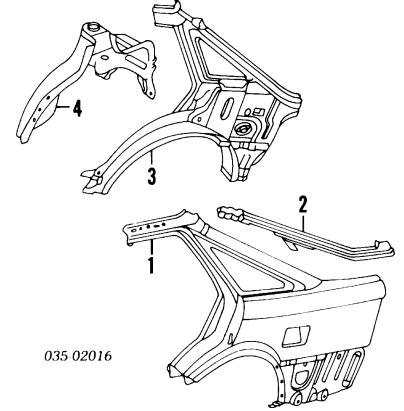

035-02016

- 2 Pillar, Rear L GJY7-71-41XA  
R G225-70-440  
L G225-71-440  
Door, Fuel G211-42-410A
- 3 Panel, Inner R GJ37-70-110B  
L GJ37-71-110B
- 4 Panel, Wheelhouse R G211-70-150D  
L G211-71-150E


### INTERIOR TRIM 5 DOOR

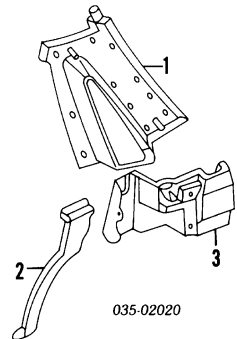

035-02020

- 1 Panel, Trim Upper (†) R GL65-68-250A-44  
L GL65-68-260A-44  
R G211-68-760A-48  
L G211-68-780A-48
- 2 Wheelhouse (†) R GJ37-68-84X-48  
L GJ37-68-86X-48
- 3 Upper R G225-68-850A-48  
L G225-68-870A-48
- 4 Lower †Blue listed, Order by Application
- Speaker, Rear (a) 19 Red; 43 Beige; 48 Blue; 71 Taupe; 96 Dark Gray  
0000-81-5817-01  
*(a) Order by Application*

### EXTERIOR TRIM 4 DOOR, 5 DOOR

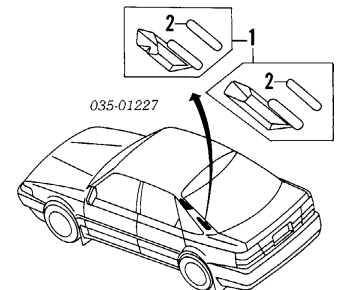

035-01227


- 1 Chamber Assy, Extractor 4 Door R G211-51-920  
L G211-51-940
- 5 Door Upper R G225-51-920  
L G225-51-940
- Lower R G225-51-8V0  
L G225-51-8W0
- 2 Gasket, Extractor (†) 4 Door R/L G211-51-922  
5 Door R/L G225-51-922  
Upper R/L G225-51-8V2  
Lower †Included w/Extractor Chamber Assy

# MAZDA 626 1988-92

- Mldg, Center Pillar**  
 4 Door R G211-50-8E0  
 L G211-50-8F0  
 5 Door R G225-50-8E0  
 L G225-50-8F0


## QUARTER GLASS

### 4 DOOR

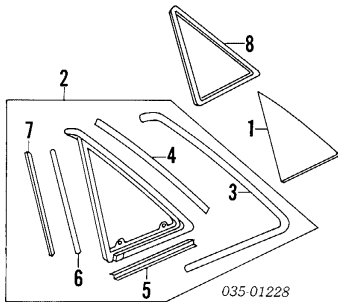

- 1 **Glass, Quarter**  
 Mazda (Tint) R G211-62-951  
 L G211-63-951
- 2 **Moulding Assy, Reveal**  
 To 4-22-91 R G211-50-810C  
 L G211-50-820C  
 From 4-22-91 R GN51-50-810  
 L GN51-50-820
- Protector, Garnish**¶  
 3 Rear Outer R/L G211-50-828  
 4 Rear Inner R/L G211-50-G27  
 To 4-22-91 R/L GR11-50-G27  
 From 4-22-91 R/L G211-50-813  
 5 Lower R G211-50-815  
 L G211-50-825  
 6 Front Inner R G211-50-814  
 L G211-50-814  
 ¶Included w/Reveal Moulding Assy
- 7 Front Outer R/L G211-50-814  
 L G211-50-814
- 8 **Weatherstrip** R/L G211-50-807

### 5 DOOR

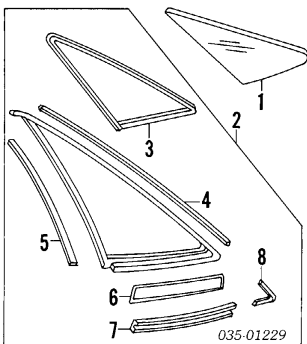


- 1 **Glass, Quarter**  
 Mazda (Tint) R G225-62-951A  
 L G225-63-951A
- 2 **Moulding Assy, Reveal**  
 Chrome R G225-50-810D  
 L G225-50-820D  
 Black R GM66-50-810D  
 L GM66-50-820D
- 3 **Weatherstrip**¶ R/L G225-50-807
- Protector, Garnish**¶  
 4 Rear R/L G225-50-G27  
 5 Front R/L G226-50-815  
 6 Lower Inner R/L G226-50-813  
 7 Lower Outer R/L G225-50-812A  
 8 Corner R G225-50-819A  
 L G225-50-829A  
 ¶Included w/Reveal Moulding Assy

## LUGGAGE LID


Illustration Located in Next Column

- 1 **Lid, Luggage** GJY9-52-610  
**Moulding, Lid** 8AG1-50-941  
**Nameplate**  
 Adhesive  
 "2.2" GJ21-51-771  
 "4 WS" G238-51-761A  
 "Turbo" GJ25-51-771  
 "Mazda" GJ21-51-710A  
 "Mazda 626" GJ21-51-720
- Panel, Outer Finish**¶  
 To 9-20-89 G225-51-3A0  
 From 9-20-89 GJ37-51-3A0-5D  
 ¶Harbor Blue Met listed, Order by Application  
 DV Day Blue; UC Crystal White;  
 K3 Sunbeam Silver Met; PZ Brilliant Black;  
 VK Corn Beige; WY Noble White; 1E Bayside Blue Met  
 1F Winning Silver Met; 1H Steel Gray Met;  
 2E Nordic Green Met; 2H Claret Met; 3L Silver Stone Met;  
 5A Sapphire Blue Met; 5D Harbor Blue Met;  
 5G Prestige Silver Met; 5N Brave Blue Met;  
 5P Porcelain Silver Met; 6S Exceed Green Met;  
 6H Mellow Burgundy MC; 6L Graceful Red MC;
- Panel, Inner Trim**¶  
 2 Upper G225-68-9X0-48

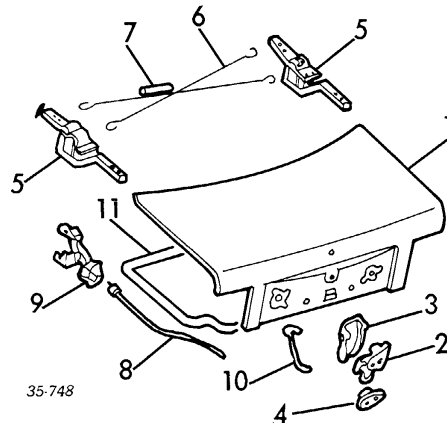

- 35-748  
 USA Built GN81-51-3AY-00  
 Japan Built GJ29-51-3A0
- 1 Blue listed, Order by Application  
 UC Crystal White; PZ Brilliant Black;  
 K3 Sunbeam Silver Met; VK Corn Beige  
 WY Noble White; 1E Bayside Blue Met;  
 1F Winning Silver Met; 1H Steel Gray Met  
 2E Nordic Green Met; 2H Claret Met  
 5A Sapphire Blue Met; 5G Prestige Silver Met  
 5N Brave Blue Met; 5P Porcelain Silver Met;  
 6L Graceful Red Met; 6N Curran Blue Met;  
 6S Exceed Green Met; 3L Silver Stone Met;  
 3N Warm Gray MC;
- 2 **Latch** GJ21-56-820B  
 3 **Cover, Latch** GJ21-56-823A  
**Cylinder w/Key**  
 w/Theft Deterrent GJ30-76-230  
 w/o Theft Deterrent GJ29-76-230  
 4 **Striker** GJ21-56-840C  
 5 **Hinge** R G211-52-710C  
 L G211-52-720B  
 R/L G211-56-851-2  
 B130-56-805A
- 6 **Spring, Balance**  
 7 **Protector, Spring**  
 8 **Cable, Opener** G211-56-870A  
 For Luggage Lid GJ29-56-880  
 For Fuel Door GJ22-56-860A
- 9 **Lever, Opener** G211-56-822  
 10 **Rod, Lid Opening** G211-56-951B  
 11 **Weatherstrip** G211-56-951B


## LIFTGATE

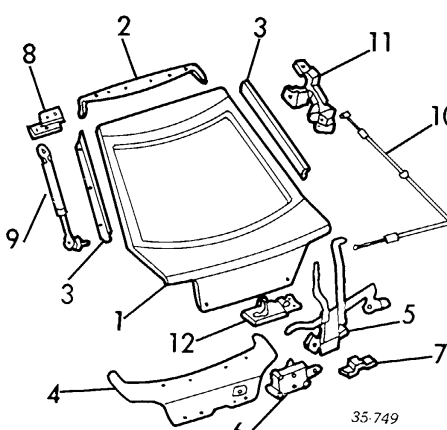

- 35-749
- 1 **Shell, Gate** GJY8-62-020  
**Nameplate**  
 Adhesive  
 "2.2" GJ21-51-771  
 "Turbo" GJ25-51-771  
 "Mazda" GJ21-51-710A  
 "Mazda 626" GJ21-51-720
- Panel, Outer Finish**¶  
 To 9-20-89 G225-51-3A0  
 From 9-20-89 GJ37-51-3A0-5D  
 ¶Harbor Blue Met listed, Order by Application  
 DV Day Blue; UC Crystal White;  
 K3 Sunbeam Silver Met; PZ Brilliant Black;  
 VK Corn Beige; WY Noble White; 1E Bayside Blue Met  
 1F Winning Silver Met; 1H Steel Gray Met;  
 2E Nordic Green Met; 2H Claret Met; 3L Silver Stone Met;  
 5A Sapphire Blue Met; 5D Harbor Blue Met;  
 5G Prestige Silver Met; 5N Brave Blue Met;  
 5P Porcelain Silver Met; 6S Exceed Green Met;  
 6H Mellow Burgundy MC; 6L Graceful Red MC;
- Panel, Inner Trim**¶  
 2 Upper G225-68-9X0-48


- 3 **Side** R G225-68-930-48  
 L G225-68-940-48
- 4 **Lower** GJ37-68-950-48  
 ¶Blue listed, Order by Application  
 19 Red; 43 Beige; 48 Blue; 71 Taupe; 96 Dark Gray  
 GJ37-62-310C
- 5 **Latch**  
**Cylinder & Key** GJ38-76-260  
 w/Theft Deterrent GJ37-76-260  
 w/o Theft Deterrent GJ37-62-350B  
 6 **Controller, Lock** G225-62-361C  
 7 **Striker** R/L B01A-62-210  
 8 **Hinge** R 8BG2-62-620  
 L 8BG2-63-620  
 9 **Stay (Prop)** GJ37-56-880  
 GJ22-56-860A  
 G225-62-410A  
 G225-62-761A
- 10 **Cable, Fuel Lid Opener**  
 11 **Lever, Opener**  
 12 **Handle, Outer**  
**Weatherstrip**

## GLASS & PARTS

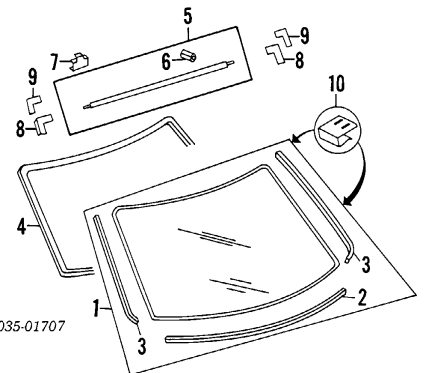

- 035-01707
- 1 **Glass Assy, Rear Gate**  
 Mazda (Tint) G225-63-930
- 2 **Mldg, Lower Reveal**¶  
 Chrome G225-50-6K0  
 Black G284-50-6K0
- 3 **Mldg, Side Reveal**¶  
 Chrome R/L G225-50-612-3  
 Black R/L G284-50-612-3  
 ¶Included w/Rear Gate Glass Assy
- 4 **Weatherstrip** GA7B-50-899
- 5 **Moulding Assy, Upper Reveal**  
 Chrome 8AG2-50-611  
 Black 8AG6-50-611
- 6 **Clip, Mldg (a) (4)** B093-50-918  
 (a) Included w/Upper Reveal Moulding Assy
- 7 **Clip, Upper Mldg (6)**  
 To 9-1-87 B092-50-609  
 From 9-1-87 B092-50-919
- 8 **Mldg, Upper Corner**  
 Chrome R G225-50-6HY  
 L G225-50-6JY  
 Black R GM66-50-6HY  
 L GM66-50-6JY
- 9 **Gskt, Corner Mldg**  
 R G225-50-6H1  
 L G225-50-6H2
- 10 **Clip, Window (4)** G225-50-898

## WIPER SYSTEM

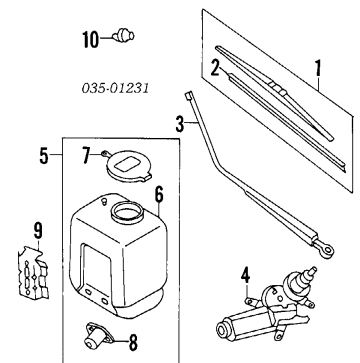


- 035-01231
- 1 **Blade Assy, Wiper** FB02-67-330  
 2 **Insert, Wiper**¶ GA8A-67-331B  
 ¶Included w/Wiper Blade Assy
- 3 **Arm, Wiper** G226-67-421A  
 4 **Motor, Wiper** G226-67-450A  
 5 **Reservoir Assy, Washer** G226-67-480  
 6 **Tank, Washer** G226-67-481  
 7 **Cap, Tank**¶ G226-67-483  
 8 **Pump, Washer**¶ 8532-76-672  
 ¶Included w/Washer Reservoir Assy
- 9 **Bracket, Reservoir** G226-67-521  
 10 **Nozzle, Spray** B163-67-510

# MAZDA 626 1988-92


## REAR SUSPENSION

### 2WS

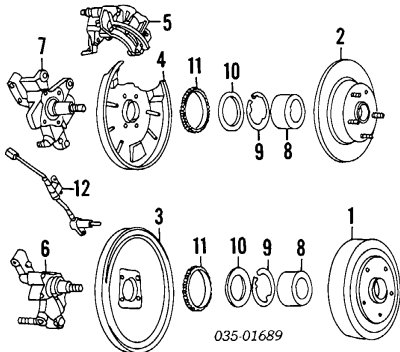

035-01689


- |                                   |         |                |
|-----------------------------------|---------|----------------|
| 1 Drum, Brake                     | R/L     | GJ21-26-251B   |
| 2 Rotor, Brake                    | R/L     | GW55-26-251    |
| 3 Plate, Backing                  | R       | GJ21-26-280B   |
|                                   | L       | GJ21-26-290B   |
| 4 Shield, Splash                  | R       | GJ55-26-261A   |
|                                   | L       | GJ55-26-271A   |
| 5 Caliper, Brake                  | 88-89 R | GJY5-26-98ZR   |
|                                   | L       | GJY5-26-99ZR   |
|                                   | 90-92 R | GJY5-26-98ZR   |
|                                   | L       | GJY5-26-99ZR   |
| Hose, Brake <sup>†</sup>          | R/L     | G030-43-980B   |
| <sup>†</sup> Order by Application |         |                |
| Spindle, Hub                      |         |                |
| 6 Drum Brakes                     | R       | GJ21-26-1A0C   |
|                                   | L       | GJ21-26-1B0C   |
| 7 Disc Brakes                     | R       | GJ26-26-1A0B   |
| w/ABS                             | L       | GJ26-26-1B0B   |
|                                   | R       | GJ25-26-1A0B   |
| w/o ABS                           | L       | GJ25-26-1B0B   |
| 8 Bearing                         | R/L     | GJ21-26-151-MV |
| 9 Circlip                         | R/L     | GJ21-26-139    |
| 10 Seal, Bearing                  | R/L     | GJ21-26-154    |
| 11 Rotor, ABS Sensor              | R/L     | GJ26-26-471B   |
| 12 Sensor, ABS Wheel              | R       | G09A-43-71YA   |
|                                   | L       | G09A-43-72YA   |

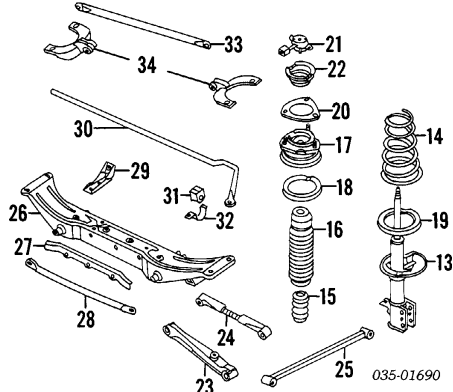

035-01690


- |                                    |              |                 |
|------------------------------------|--------------|-----------------|
| 13 Strut <sup>†</sup>              | R/L          | GJ22-28-700F-9U |
| 14 Spring, Coil <sup>†</sup>       | R/L          | GJ21-28-011A    |
| <sup>†</sup> Order by Application  |              |                 |
| 15 Stopper, Bumper                 |              |                 |
| w/Turbo                            | R/L          | KA11-34-111A    |
| w/o Turbo                          | R/L          | GJ21-28-111     |
| 16 Cover, Lever                    | R/L          | GJ21-28-015     |
| 17 Seat, Spring                    | R/L          | GJ21-28-380A    |
| 18 Pad, Spring                     |              |                 |
| 19 Upper                           | R/L          | GJ21-28-012A    |
| 20 Lower                           | R/L          | M001-28-012B    |
| 21 Pad, Seat                       | R/L          | GJ21-28-013     |
| 22 Actuator, Upper (a)             | R/L          | GJ22-34-080A    |
| 23 Casing, Actuator (a)            | R/L          | GJ22-28-084B    |
| <sup>(a)</sup> For AAS Only        |              |                 |
| 24 Link, Front Lateral             | R            | G211-28-620B    |
|                                    | L            | G211-28-630B    |
| 25 Link, Rear Lateral              | R/L          | G211-28-600B    |
| 26 Link, Trailing                  | 88-89 R      | KA24-28-200     |
|                                    | L            | KA24-28-250     |
|                                    | 90-92 R      | KA31-28-200     |
|                                    | L            | KA31-28-250     |
| 27 Crossmember                     | GJ21-28-800B |                 |
| 28 Support, Crossmember            | GJ21-28-804  |                 |
| 29 Rod, Performance-Not Applicable |              |                 |
| 30 Bracket, Muffler                | GJ21-28-840B |                 |
| 31 Bar, Stabilizer <sup>†</sup>    | G211-28-151A |                 |
| <sup>†</sup> Order by Application  |              |                 |
| 32 Bushing, Bar                    | R/L          | G067-28-156     |
| 33 Bracket, Bar                    | R/L          | GJ21-28-155     |
| 34 Upper Strut Bar-Not Applicable  |              |                 |
| 35 Strut Plate-Not Applicable      |              |                 |

### 4WS

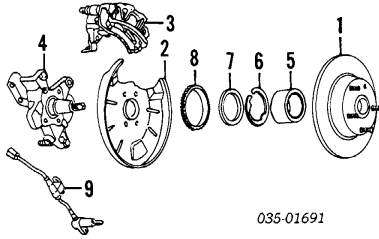

035-01691

- |                                   |         |                |
|-----------------------------------|---------|----------------|
| 1 Rotor, Brake                    | R/L     | G238-26-251C   |
| 2 Plate, Backing                  | R       | G245-26-261    |
|                                   | L       | G245-26-271    |
| 3 Caliper, Brake                  | 88-89 R | G2Y8-26-98ZR   |
|                                   | L       | G2Y8-26-99ZR   |
|                                   | 90-92 R | GK83-26-980B   |
|                                   | L       | GK83-26-990B   |
| Hose, Brake <sup>†</sup>          | R/L     | G238-43-810A   |
| <sup>†</sup> Order by Application |         |                |
| 4 Spindle, Hub                    | R       | G238-26-1A1    |
|                                   | L       | G238-26-1B1    |
| 5 Bearing                         | R/L     | G238-26-151-MV |
| 6 Circlip                         | R/L     | G717-26-139    |
| 7 Seal, Bearing                   | R/L     | G717-26-154    |
| 8 Rotor, ABS Sensor               | R/L     | G238-26-471B   |
| 9 Sensor, ABS Wheel               | R       | G238-43-71Y    |
|                                   | L       | G238-43-72YA   |

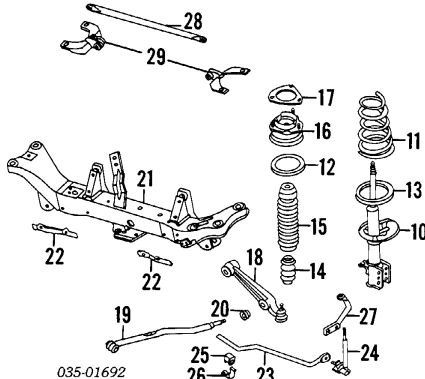


035-01692

- |                                   |              |               |
|-----------------------------------|--------------|---------------|
| 10 Strut <sup>†</sup>             | R/L          | G309-28-700C  |
| 11 Spring, Coil <sup>†</sup>      | R/L          | G309-28-011A  |
| <sup>†</sup> Order by Application |              |               |
| 12 Pad, Spring Upper              | R/L          | GJ21-28-012A  |
| 13 Pad, Spring Lower              | R/L          | M001-28-012B  |
| 14 Stopper, Bumper                | R            | G309-28-111   |
|                                   | L            | GJ21-28-111   |
| 15 Cover, Lever                   | R/L          | GJ21-28-015   |
| 16 Seat, Spring <sup>†</sup>      | R/L          | GJ21-28-380A  |
| <sup>†</sup> Order by Application |              |               |
| 17 Seat, Rubber Upper             | R/L          | GJ21-28-013   |
| 18 Arm, Lower                     | R/L          | G238-28-300B  |
| 19 Link, Trailing                 | R            | G238-28-200D  |
|                                   | L            | G238-28-250D  |
| 20 Bushing, Link (2/Side)         | R/L          | G238-28-201   |
| 21 Crossmember                    | G238-28-800B |               |
| 22 Protector, Xmbr                | R            | G238-28-804   |
|                                   | L            | G238-28-805A  |
| 23 Bar, Stabilizer                | G238-28-151A |               |
| 24 Link, Bar                      | R/L          | G238-28-170   |
| 25 Bushing, Bar                   | R/L          | G238-28-156B  |
| 26 Bracket, Bushing               | R/L          | G238-28-155A  |
| 27 Bracket, Bar                   | R/L          | G238-28-152-3 |
| 28 Strut, Bar                     |              |               |
| Man Trans                         | G311-28-913A |               |
| 29 Plate, Strut                   | R            | G311-28-920   |
| Man Trans                         | L            | G311-28-9Y0   |

## REAR STEERING LINKAGE/GEAR

Illustration Located in Next Column


- |   |                 |
|---|-----------------|
| 1 Gear Assy                                     | G238-32-J60F    |
| 2 Rod Assy, Mechanism Control <sup>†</sup>      | R G309-32-E19   |
|   | L G238-32-E50   |
| Rod, Piston <sup>†</sup> (a)                    | G238-32-E19     |
| <sup>(a)</sup> Included w/Mech Control Rod Assy |                 |
| 3 Gear, Worm <sup>†</sup>                       | G238-32-E60     |
| 4 Boot <sup>†</sup>                             | R G238-32-A25   |
|   | L G238-32-A26   |
| 5 Ball Joint Set <sup>†</sup>                   | R/L 8AG1-32-280 |
| 6 Filler, Control Box <sup>†</sup>              | G238-32-F30     |
| 7 Pipe, Upper <sup>†</sup>                      | G238-32-D20     |
| 8 Pipe, Lower <sup>†</sup>                      | G238-32-D30     |
| 9 Motor, Stepping Control <sup>†</sup>          | G238-32-E1XA    |

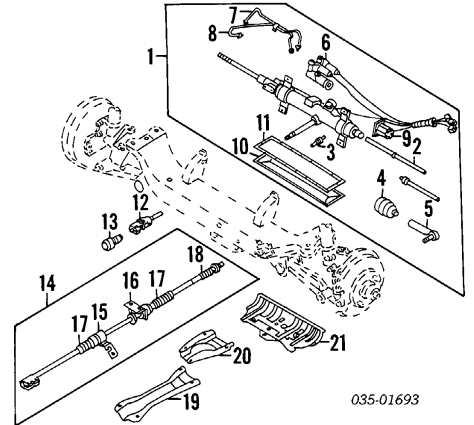

035-01693

- |   |              |
|---|--------------|
| 10 Cover, Cont Box <sup>†</sup>                 | G238-32-A61  |
| 11 Gskt, Cont Box <sup>†</sup>                  | G238-32-A62A |
| <sup>†</sup> Included w/Gear Assy               |              |
| 12 Joint, Universal                             | G238-32-D14  |
| 13 Boot, Shaft                                  | G238-32-D11  |
| 14 Shaft Assy, Connecting                       |              |
| 1988-89   |              |
| Man Trans                                       | G322-32-A00  |
| Auto Trans                                      | G238-32-A00A |
| 1990-92   | G238-32-A00A |
| 15 Support, Front Shaft (b)                     | G238-32-154  |
| 16 Support, Rear Shaft (b)                      | G238-32-155  |
| 17 Boot, Rack (b) (2)                           | G309-32-125  |
| 18 Boot, Dust (b)                               | G292-32-125  |
| <sup>(b)</sup> Included w/Connecting Shaft Assy |              |
| Protector, Connecting Shaft                     |              |
| 19 Front  | G238-32-464A |
| 20 Rear   | G238-32-474  |
| 21 Protector, Gear Assy                         | G238-32-470A |

## FUEL TANK

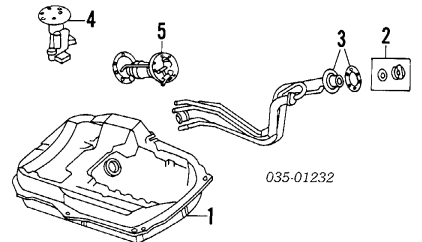

035-01232

- |  |                |
|--|----------------|
| 1 Tank, Fuel                               |                |
| 2WS  | GJ21-42-110G   |
| 4WS  | GM39-42-110K   |
| 2 Cap Assy, Filler                         |                |
| To 6-1-89                                  | BF67-42-250    |
| From 6-1-89                                | GN60-42-250    |
| Gasket <sup>†</sup>                        | BF67-42-252    |
| <sup>†</sup> Included w/Filler Cap Assy    |                |
| 3 Pipe Assy, Filler                        |                |
| 1988-89                                    | GJ29-42-210B   |
| 1990-92                                    |                |
| 2WS  | GN51-42-210    |
| 4WS  | GN60-42-210    |
| Gasket (a)                                 | 0866-42-366B   |
| <sup>(a)</sup> Included w/Filler Pipe Assy |                |
| 4 Gauge, Tank Unit <sup>†</sup>            |                |
| 2WS  |                |
| w/Digital Gauge                            | GJ22-60-960D   |
| w/o Digital Meter                          | GJ21-60-960D   |
| 4WS  | R G238-60-960A |
|  | L G238-60-970B |
| 5 Pump Assy, Fuel <sup>†</sup>             |                |
| 2WS  | F201-13-350H   |
| 4WS  | FE3N-13-350C   |
| <sup>†</sup> Order by Application          |                |
| Gasket (a)                                 | G114-60-962    |
| <sup>(a)</sup> Included w/Fuel Pump Assy   |                |


## REAR BODY

### SHEET METAL


Illustration Located in Next Column

- |                                    |                |
|------------------------------------|----------------|
| 1 Panel, Rear End                  |                |
| 4 Door                             | GJ21-70-750    |
| 5 Door                             | G225-70-750    |
| 2 Ext, Rear End Panel (Below Lamp) |                |
| 4 Door                             | R G211-70-405A |

# MAZDA 626 1988-92

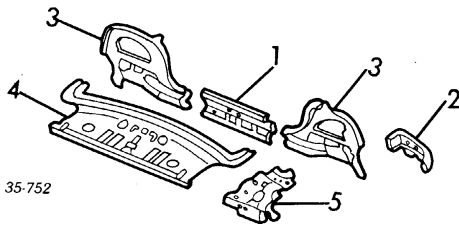


- 35-752
- 5 Door
    - L G211-71-405A
    - R G225-70-405A
    - L G225-71-405A
  - 3 Bracket, Lamp
    - 4 Door
      - R G211-70-490A
      - L G211-71-490A
    - 5 Door
      - R G225-70-490
      - L G225-71-490
  - 4 Panel, Package Tray
    - 88-89 GJ29-70-500B
    - 90-92 G211-70-500B
    - R/L G211-70-180A
  - 5 Joint, Package Tray
    - For 4 Door Only

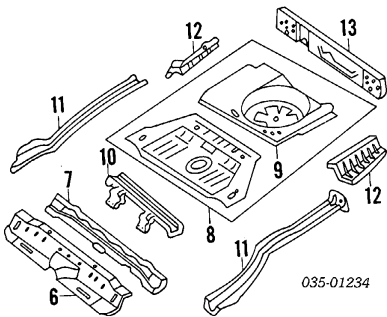

- 035-01234
- 6 Crossmember, Upper
    - G211-53-910
  - 7 Crossmember, Center Pan
    - 2WS GJ21-53-900B
    - 4WS G238-53-900
  - 8 Pan Assy, Rear Floor
    - GJ21-53-710
  - 9 Pan, Rear Floor (a)
    - GJ21-53-750B
    - (a) Included w/Rear Floor Pan Assy
  - 10 Crossmember, Rear Pan
    - 2WS GJ21-53-920C
    - 4WS G238-53-920
  - 11 Frame, Rear Side
    - 1988-89
      - 2WS
        - R GJ29-53-810C
        - L GJ29-54-810D
      - 4WS
        - R GK83-53-810
        - L GK83-54-810
    - 1990-92
      - USA Built
        - R GJ29-53-810C
        - L GJ29-54-810D
      - Japan Built
        - R GJ29-53-810C
        - L GJ29-54-810D
  - 12 Panel, Floor Side
    - 2WS
      - R GJ21-53-730B
      - L GJ21-54-730D
    - 4WS
      - R GJ21-53-730B
      - L G238-54-730C
  - 13 Crossmember, Rear
    - GJ21-53-980C

## INTERIOR TRIM

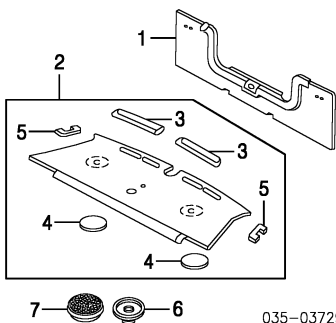


- 035-03729
- 1 Trim, Rear End
    - 1988-89
      - DX Model G211-68-890-96
      - LX Model G212-68-890-96
    - 1990-92
      - DX Model GN81-68-890-96
      - LX Model GN82-68-890-96
  - 2 Trim Assy, Package Tray (a)
    - 1988-89
      - GJ29-68-310D-96
    - 1990-92
      - GN52-68-310C-96
  - 3 Grille, Extractor (a)
    - R/L GJ21-68-312-96
  - 4 Cover, Hole (a)
    - 88-89 R/L G116-68-324

- 5 Vessel, Seat Belt (a) 90-92 R/L GJ29-68-3B1-96
  - Gray listed, Order by Application
  - (a) Included w/Package Tray Trim Assy
- 6 Speaker, Radio
  - w/CD Player R/L 0000-81-6142-01
  - w/o CD Player R/L 0000-81-5818-01
- 7 Grille, Speaker
  - R/L GN51-66-980B-98
  - Gray listed, Order by Application

## REAR LAMPS

### COMBINATION LAMP ON REAR BODY 4 DOOR

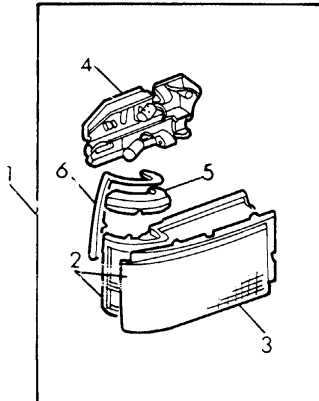


35-754

- 1 Lamp Assy, Combination
  - 88-89 R 8BGK-51-150
  - L 8BGK-51-160
  - 90-92 R 8DG8-51-150
  - L 8DG8-51-160
- 2 Lens & Body Assy
  - 88-89 R GJ29-51-170
  - L GJ29-51-180
  - 90-92 R GN51-51-170
  - L GN51-51-180
- 3 Lens (a)
  - 88-89 R GJ29-51-151
  - L GJ29-51-180
  - 90-92 R GN51-51-170
  - L GN51-51-161
- (a) Included w/Lens & Body Assy
- 4 Panel, Socket
  - R GJ29-51-155
  - L GJ29-51-165
- 5 Moulding, Lamp
  - R G211-51-156
  - L G211-51-166
- 6 Protector, Side
  - R G211-51-159
  - L G211-51-169

(a) Included w/Combination Lamp Assy  
Extension, Rear End Panel  
-See Rear Body Section

### COMBINATION LAMP ON REAR BODY 5 DOOR

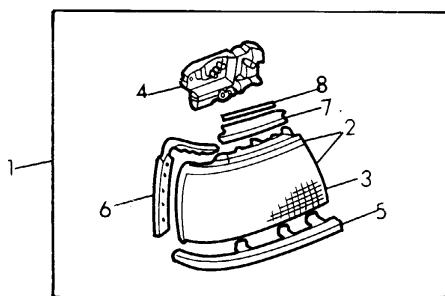

35-755


- 1 Lamp Assy, Combination
  - 88-89 R 8BGL-51-150B
  - L 8BGL-51-160B
  - 90-91 R 8DG9-51-150
  - L 8DG9-51-160
- 2 Lens & Body Assy
  - 88-89 R GJ37-51-170C
  - L GJ37-51-180C
  - 90 R GN70-51-170
  - L GN70-51-180
- 3 Lens (a)
  - 88-89 R GJ37-51-151B
  - L GJ37-51-161B
  - 90-91 R GN70-51-151
  - L GN70-51-161
- (a) Included w/Lens & Body Assy
- 4 Panel, Socket
  - 88-89 R GJ37-51-155
  - L GJ37-51-165
  - 90-91 R GN70-51-155
  - L GN70-51-165
- Bulb, Signal
  - R/L 0000-11-0168
- Bulb, Back-Up
  - R/L 0000-11-1156

- Bulb, Tail/Stop
  - R/L 0000-11-1157
- 5 Moulding, Lamp
  - R G226-51-156
  - L G226-51-166
- 6 Protector, Side
  - R G225-51-159
  - L G225-51-169
- 7 Cover
  - R G225-51-157
  - L G225-51-167
- 8 Protector, Cover
  - 88-89 R/L G225-51-173A
  - 90-91 R G225-51-158
  - L G225-51-168

(a) Included w/Combination Lamp Assy

Extension, Rear End Panel  
-See Rear Body Section


### COMBINATION LAMP ON DECK LID 4 DOOR

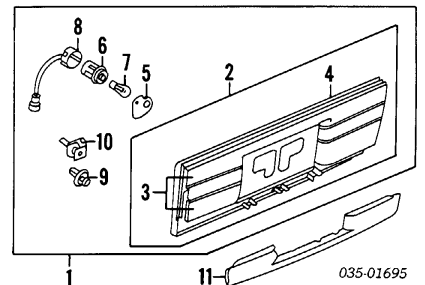

035-01695

- 1 Lamp Assy, Combination
  - 88-89 8BG2-51-390
  - 90-92 8BGE-51-390
- 2 Lens & Housing Assy
  - 88-89 R GJ29-51-39X
  - 90-92 GN51-51-39X
- 3 Lens (a)
  - Center
    - 88-89 GJ29-51-3B2
    - 90-92 GN51-51-3B2
  - Outer
    - 88-89 R GJ29-51-3A5
    - L GJ29-51-3B5
    - 90-92 R GN51-51-3A5
    - L GN51-51-3B5
- 4 Protector, Lamp (a)
  - 1988-89 R/L G225-51-3A3
  - (a) Included w/Lens & Housing Assy
- 5 Gasket, Lamp
  - 88-89 R/L G225-51-388
  - 90-92 R/L G211-51-388
- 6 Socket w/Wire
  - R/L GJ29-51-387
- 7 Bulb
  - R/L 0000-11-1157
- 8 Cap
  - 88-89 R/L GJ21-51-389
- 9 Fastener, Lamp
  - 1988-89 (2/Side) R/L B252-51-PJ5A
  - 1990-92 R/L G113-50-857A
- 10 Collar, Lamp
  - R/L G225-51-3A4
  - (a) Included w/Combination Lamp Assy
- 11 Panel, Outer Finish-See Luggage Lid Section

### COMBINATION LAMP ON DECK LID 5 DOOR

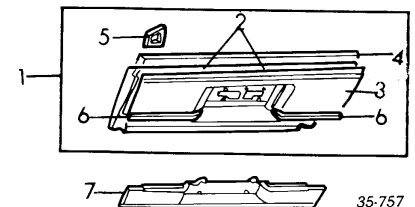

35-757

- 1 Lamp Assy, Combination
  - 88-89 8BG6-51-390
  - 90-91 8BGP-51-390
- 2 Lens & Housing Assy
  - 88-89 G225-51-39XB
  - 90-91 GN70-51-3H0
  - GN70-51-3H1
- 3 Lens (a)
  - (a) Included w/Lens & Housing Assy
- 4 Protector
  - G225-51-3A3
- 5 Gasket, Lamp
  - G225-51-388
- 6 Moulding, Lamp
  - R/L G225-51-381-2
  - (a) Included w/Combination Lamp Assy
- 7 Panel, Outer Finish-See Rear/Liftgate Section

### HIGH MOUNT STOP LAMP ON PACKAGE TRAY 4 DOOR

Illustration Located in Next Column

- 1 Lamp Assy, Stop
    - GJ29-51-580A-48
  - 2 Lens Unit (a)
    - GJ29-51-593-48
  - 3 Cover (a)
    - GJ29-51-587-48
- (a) Blue listed, Order by Application  
19 Red; 43 Beige; 48 Blue; 71 Taupe; 96 Dark Gray